

DEPARTMENT OF GEOLOGICAL SCIENCES
COLLEGE OF SCIENCES
OLD DOMINION UNIVERSITY
NORFOLK, VA 23508

TECHNICAL REPORT GSTR-88-1

**THEORY AND OPERATION OF THE REAL-TIME
DATA ACQUISITION SYSTEM FOR THE NASA-LaRC
DIFFERENTIAL ABSORPTION LIDAR (DIAL)**

By

Carolyn Butler

Submitted by Dr. Randall Spencer, Principal Investigator

Final Report

For the period January 1, 1986 to December 31, 1987

Prepared for the
National Aeronautics and Space Administration
Langley Research Center
Hampton, Virginia 23665

Under

Research Contract F33615-86-C-3230
Dr. Edward Browell, Technical Monitor
Chemistry and Dynamics Branch

January 1988

(NASA-CR-182383) THEORY AND OPERATION OF
THE REAL-TIME DATA ACQUISITION SYSTEM FOR
THE NASA-LaRC DIFFERENTIAL ABSORPTION LIDAR
(DIAL) Final Report, 1 Jan. 1986 - 31 Dec.
1987 (Old Dominion Univ.) 65 p CSCL 20E G3/36

N89-13773

Unclas
0118210

DEPARTMENT OF GEOLOGICAL SCIENCES
COLLEGE OF SCIENCES
OLD DOMINION UNIVERSITY
NORFOLK, VA 23508

TECHNICAL REPORT GSTR-88-1

**THEORY AND OPERATION OF THE REAL-TIME
DATA ACQUISITION SYSTEM FOR THE NASA-LaRC
DIFFERENTIAL ABSORPTION LIDAR (DIAL)**

By

Carolyn Butler

Submitted by Dr. Randall Spencer, Principal Investigator

Final Report

For the period January 1, 1986 to December 31, 1987

Prepared for the
National Aeronautics and Space Administration
Langley Research Center
Hampton, Virginia 23665

Under

Research Contract F33615-86-C-3230
Dr. Edward Browell, Technical Monitor
Chemistry and Dynamics Branch

Submitted by the
Old Dominion University Research Foundation
P. O. Box 6369
Norfolk, Virginia 23508



January 1988

TABLE OF CONTENTS

| | Page |
|---|------|
| INTRODUCTION..... | 1 |
| AIRBORNE DIAL SYSTEM..... | 2 |
| DATA ACQUISITION SYSTEM..... | 3 |
| SYSTEM CONFIGURATION AND CONNECTION..... | 6 |
| DIAL DAS PROGRAM THEORY..... | 10 |
| PERIPHERAL PROGRAMMING INFORMATION..... | 12 |
| DSD-480 Floppy Disk System..... | 12 |
| Interprocessor Link (DA11B01)..... | 14 |
| Cipher F880 Interface (Dilog D0130)..... | 14 |
| Camac Interface (Kinetics 2920-Z2B bus adaptor)..... | 16 |
| Parallel Line Interface Module (DRV11-C)..... | 18 |
| Analog-to-Digital Converter (ADV11-C)..... | 19 |
| Line Printer Controller (MLSI-LP11)..... | 19 |
| Teletype (Flessey PM-DLV11J Serial Line Interface)..... | 20 |
| Timing Control Unit (TCU-50 and TCU-50 DYR)..... | 21 |
| Matrox ORGB-GRAPH Controller..... | 23 |
| JFEP-11 Front-End Processor..... | 25 |
| LSI 11/73 Memory Management Registers..... | 26 |
| DIAL DAS SOFTWARE..... | 28 |
| Getting Started..... | 30 |
| Data Acquisition..... | 31 |
| Real-Time Data Display..... | 33 |
| Raw Data (MODE 1)..... | 34 |
| Online/Offline Overlay (MODE 2)..... | 34 |
| Gray-Scale Display (GRYSCL)..... | 37 |
| Concentration Profiles (OZONE)..... | 40 |
| Hard Copy Aerosol Color-Scale Map (MAPAER)..... | 40 |
| Hard Copy Ozone Color-Scale Map (MAPUV)..... | 42 |
| Magnetic Tape Storage and Format..... | 42 |
| Decoding Information..... | 47 |
| DIAL Pair Alignment..... | 48 |
| Sample DIAL DAS Dialogue..... | 52 |
| KEYBOARD COMMANDS..... | 55 |
| Stop Mode Commands..... | 55 |
| Start Mode Commands..... | 56 |
| REFERENCES..... | 60 |
| HARDWARE MANUALS..... | 60 |

LIST OF TABLES

| Table | | Page |
|-------|---|------|
| 1 | DIAL DAS component specifications for size, weight, and power requirements..... | 6 |
| 2 | DAS component interconnentions..... | 8 |
| 3 | Digitizer connections..... | 9 |
| 4 | Base addresses for registers used by peripheral devices..... | 12 |
| 5 | Default plotting parameters..... | 34 |
| 6 | Banner record word assignments..... | 45 |
| 7 | Data record structure for shot buffers..... | 46 |

LIST OF FIGURES

| Figure | | Page |
|--------|--|------|
| 1 | DIAL DAS component configuration in aircraft rack | 4 |
| 2 | Computer devices flow chart..... | 5 |
| 3 | Internal computer configurations..... | 7 |
| 4 | DIAL DAS program interconnections..... | 29 |
| 5 | Stacked data buffer format..... | 32 |
| 6 | Example of MODE 1 display..... | 35 |
| 7 | Example of MODE 2 display..... | 36 |
| 8 | MODE 2 display with background subtraction and range-squared options in effect on UV pair..... | 38 |
| 9 | MODE 2 display with options on IR and VIS..... | 39 |
| 10 | Example of OZONE display (300 shots averaged).... | 41 |
| 11 | Example of MAPAER and MAPUV..... | 43 |
| 12 | Example of digitizer memory as compared to saved buffer memory..... | 51 |

THEORY AND OPERATION OF THE REAL-TIME DATA
ACQUISITION SYSTEM FOR THE NASA/LANGLEY RESEARCH CENTER
DIFFERENTIAL ABSORPTION LIDAR (DIAL)

By
Carolyn Butler

INTRODUCTION

This report documents work performed under Research Grant NCCI-28 toward the improvement of computer hardware and software of the NASA Multipurpose Differential Absorption Lidar (DIAL) system. The NASA DIAL system is undergoing development and experimental deployment at NASA/Langley Research Center (LaRC) for the remote measurement of atmospheric trace gas concentrations from ground and aircraft platforms. A viable DIAL system was developed capable of remotely measuring O₃ and H₂O concentrations from an aircraft platform. Experiments involving the DIAL system were successfully performed onboard the NASA/Goddard Flight Center Electra aircraft from 1980-1987 (ref.1) and the NASA/Ames DC-8 in 1987.

The DIAL Data Acquisition System (DAS) has undergone a number of improvements over the past few years. Due to the participation of the DIAL in the Global Tropospheric Experiment (GTE), modifications and improvements of the system have been tested and used both in the laboratory environment as well as in the air. The DIAL system, in fact, was the primary system for two experiments in 1987. In the Spring the system was flown on the Electra for 5 weeks over the Amazon for the Amazon Boundary Layer Experiment and in the Fall the system was flown on the DC-8 for stratospheric work during the Ozone Hole experiment.

This report is designed to be used as an operational manual for the DIAL DAS. Many changes were performed on the system during the 1986-1987 time frame. In previous years the system was able to look either above or below the aircraft but not in both directions simultaneously. A change could be made from nadir to zenith operation in a matter of hours on the ground. The major improvement to the system in 1986 was the ability to transmit and receive all wavelengths above as well as below the aircraft. The impact on the data system was to double the amount of data being recorded. In terms of data tapes, this would have meant we would fill up a tape in less than ten minutes at 5 Hz operation. It was decided that for the most part we did not need the 5 Hz horizontal resolution so the digitizers were modified to enable them to perform internal hardware averaging of successive laser shots. The software was incorporated into the DIAL DAS to program the digitizer averaging memories to select either single shot or 5 shot averages or a combination of both (this will be discussed in more detail in a later section).

The DC-8 which was used for the ozone hole experiment, has only an up-looking window at present. Since the ozone depletion was occurring at altitudes higher than the aircraft could fly we were only interested in zenith transmission. Therefore, the DIAL system was temporarily re-configured to transmit all wavelengths (with some redundancy) in the zenith mode. Since most of the

DIAL work is done in the troposphere, the emphasis in this report will be on our zenith/nadir configuration as performed on the Electra.

The other major improvement to the DIAL system in 1986 was the ability to output real-time color maps of the ozone distribution (as we have been doing with the aerosols for the last few years). Since both LSI 11/23's were already very busy performing the existing data acquisition and real-time analysis, a third processor was added to the system to handle the ozone computations for the color maps. Also, the LSI 11/23 processors were replaced by LSI 11/73 processors with the floating point accelerators to speed up existing computations.

AIRBORNE DIAL SYSTEM

The airborne lidar system uses the DIAL technique for the remote measurement of atmospheric gas profiles. This technique determines the average gas concentration over some selected range interval by differencing the backscatter signals for laser wavelengths tuned on and off the molecular absorption line of the gas under investigation. Two DIAL wavelengths are transmitted with a 300 usec temporal separation. Simultaneously, measurements of aerosol backscatter at multiple wavelengths can be made by transmitting unused (non-doubled) energy from the DIAL system pump lasers. The aerosol measurements are single wavelength returns. Two coaxial receiver systems are used to collect and optically separate the DIAL and aerosol returns. Photomultiplier tubes (PMT) and photodiodes detect the backscattered laser returns after optical filtering, and the analog signals from these tubes are digitized, averaged and stored on high-speed magnetic tape.

The lasers can be fired at 1, 5, or 10 Hz. Current operations are to transmit four wavelengths above the aircraft and four wavelengths below the aircraft: an on-line UV and off-line UV for DIAL ozone measurements; an IR aerosol wavelength; and a visible aerosol wavelength. The nadir UV returns are both detected by the same PMT with 300 usec separation and the zenith UV returns are similarly collected by another PMT. The visible wavelengths are collected by two more PMT's and the two IR returns are detected by separate photodiodes. So we have a total of 8 returns detected by 4 PMT's and 2 diodes. The nadir IR return comes from the on-line laser while the zenith IR comes from the off-line laser so there is a 300 usec separation between the two returns. This allows us to sum the two returns with an analog switch (designed by R. J. Allen) prior to being digitized by only one digitizer. The visible returns are obtained in the same manner and digitized by just one digitizer. Present software allows up to four digitizers to be used with no more than 8192 words saved in the computer (10 MHz sampling interval). Of the 8192 words allotted per buffer, at least 40 are reserved for shot header information (shot number, navigation information, energy monitors, etc.) so a safe estimate of the number of words to record per return is obtained by dividing 8100 words per buffer by the total number of returns. However, for the nadir returns we

are usually only interested in the data return to the ground plus an additional area past the ground return for background purposes. The zenith returns, on the other hand, are not limited by ground returns so are of interest for a much greater range. So we typically record more data words of the zenith returns than we do of the nadir returns.

DATA ACQUISITION SYSTEM

The DIAL DAS is currently housed in half a double rack (see figure 1) with digitizers, control electronics and photomultiplier tube (PMT) power supplies occupying the other half. This set-up is advisable in that it eliminates the occurrence of ground loops between the PMT's and the digitizers. The DIAL DAS is based upon two Digital Equipment Corporation (DEC) LSI 11/73 processors and one MDB JFEP-11 front-end processor. Each LSI has 128K words of 16-bit memory. The overall flow chart for the DIAL DAS is shown in figure 2. In general, all data acquisition and storage is performed by the LSI on the left (LSI #1), while all data display and analysis are performed by the LSI on the right (LSI #2). LSI #1 does have one data analysis function. On command, LSI #1 will generate a real-time color scale representation of range resolved data with averaging on the ACT II. The JFEP-11 is housed in LSI #2 and has 256K words of memory of which 128k words can be shared with the host computer. The JFEP-11 does the DIAL calculation to obtain an ozone profile, performs a running average on some number of profiles and returns that average to LSI #2 for color scale representation on a second ACT II printer.

LSI #1 acts as the master computer through which the operator communicates with LSI #2 and the JFEP-11. The operator communicates with the master's software through a modified Ann Arbor keyboard (the Ann Arbor CRT has been replaced by one of the dual Panasonic monitors; the Ann Arbor interface board is mounted in a separate box). Operator input to LSI #1 is to a Plessey PM-DLV11J serial line interface with four serial line ports (the fourth port being the console input). The first serial port on LSI #1 is used to communicate to the console input port on an identical PM-DLV11J on LSI #2. The second port is used to communicate to the JFEP-11 through the SLU (serial line unit) also housed in LSI #2.

Data is presented to the operator on either the Panasonic video monitor through the Matrox QRGB-Graph controller and/or the system color printers (Act II). Hard copy images of the video graphics display may be obtained through Polaroid photography or through a software copy command to the second ACT II (with four size options). The DSD-480 dual floppy disk units (double sided and double density capabilities although not presently configured for either option) are used for storage and retrieval of program information on both LSI's. The DIAL data is stored real-time using one of two Cipher F880 magnetic tape units on 731.5 m (2400 ft) reels of 1.27 cm (.5 inch) wide magnetic tape. Two tape units are required so that continuous data is stored while one

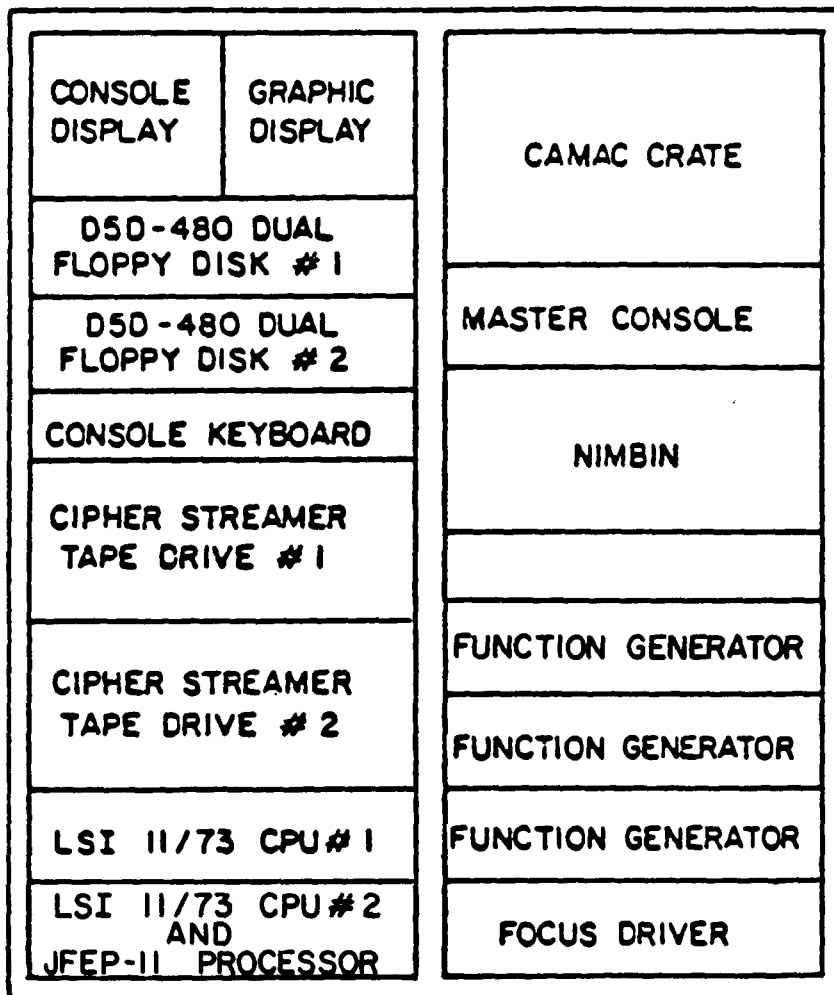


Figure 1. DIAL DAS component configuration in aircraft rack.

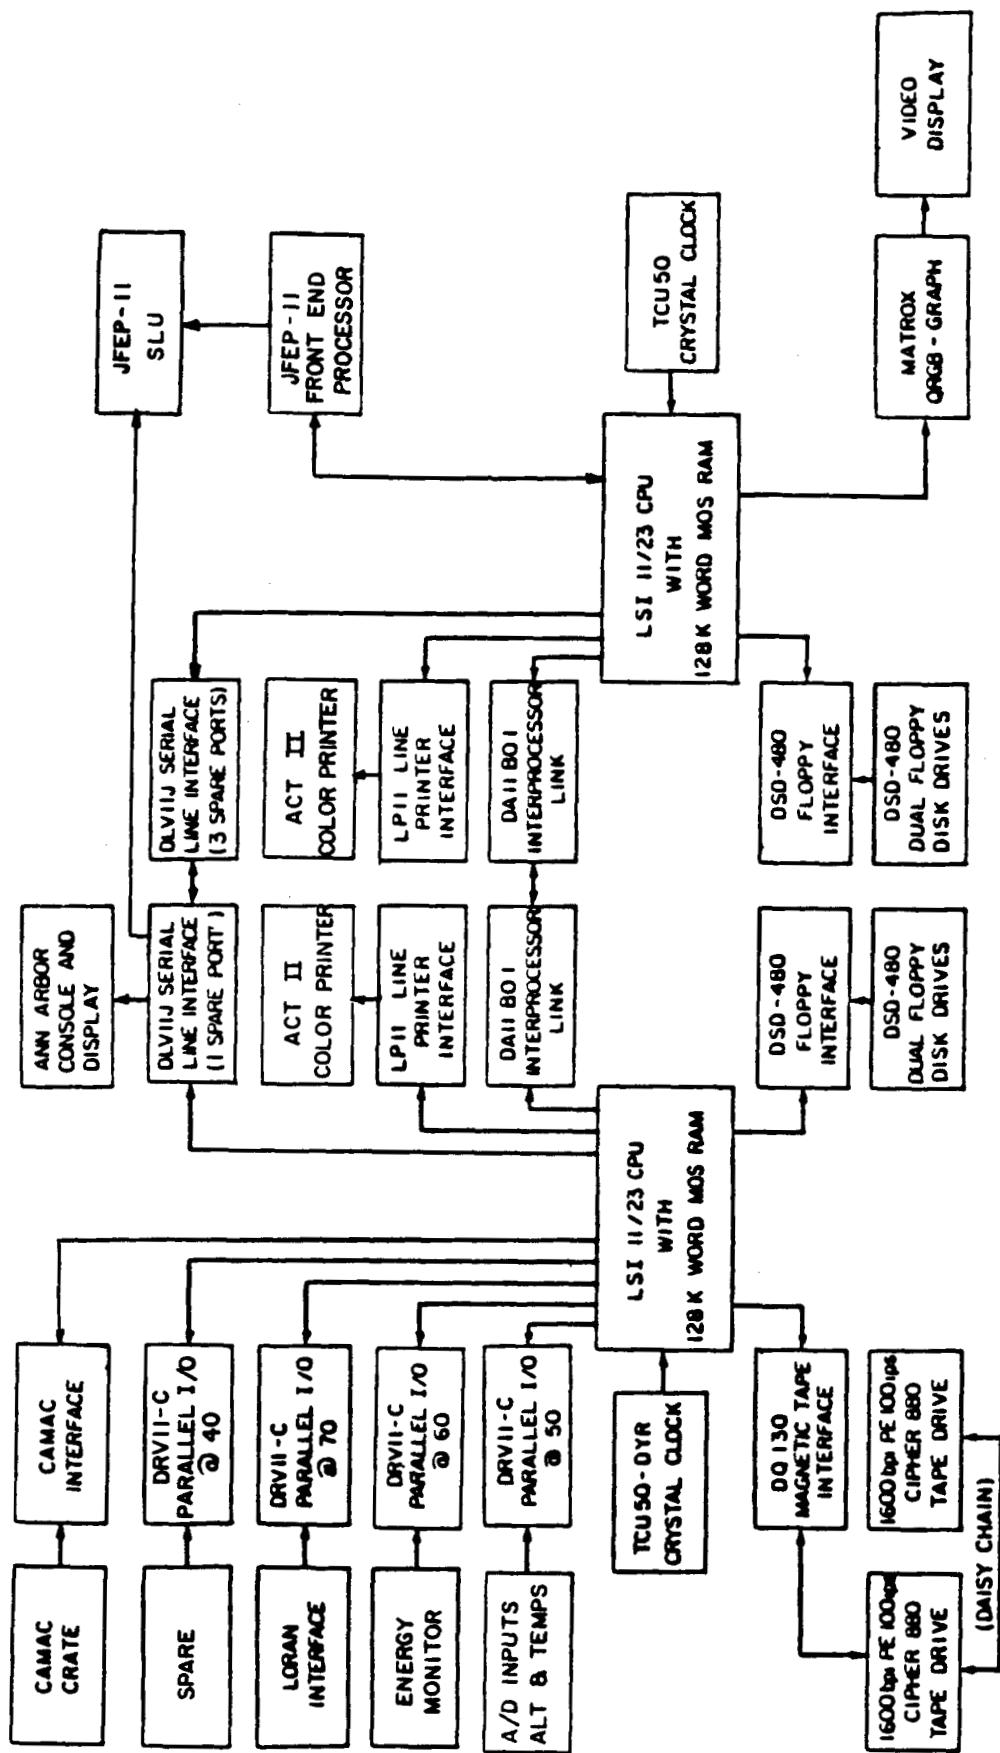


Figure 2. Computer devices flow chart.

unit is rewinding. Tape speeds and densities are as follows:

- 25 ips @1600 bpi (PE; IBM and ANSI compatible)
- 100 ips @1600 bpi (PE; IBM and ANSI compatible)
- 50 ips @3200 bpi (PE; not IBM or ANSI compatible)

A Dialog DQ130 provides Cipher interface with the LSI 11/73.

The acquisition of data is accomplished using four Transiac Model 2012S waveform digitizers (each with a 4100 averaging memory). The Transiacs are manually programmable for digitization of analog signals into 12-bit memory of selectable record lengths (the settings are typically 4096 for DIAL applications) and selectable record averages. The internal memories of these digitizers are made available to the LSI 11/73 through a Kinetics Systems Direct Memory Access (DMA) interface board. In addition, there are four DRV11-C modules in LSI #1 available for parallel interfacing of TTL digital signals.

SYSTEM CONFIGURATION AND CONNECTION

Data on system component size, weight, and power consumption requirements are given in table 1. A drawing of the two controller box distributions is shown in figure 3.

One advantage to going with a two computer system is that one computer can be dedicated to data acquisition while the second is dedicated to data analysis, thus allowing for much more real-time processing of the data. An additional advantage is hardware backup. Should one LSI fail, then the other computer

Table 1. DIAL DAS component specifications for size, weight, and power requirements.

| DIAL DAS COMPONENT | Height (in) | Weight (lb) | Power (amp @ 115 Vac) |
|----------------------------|-----------------|----------------|--------------------------|
| Magnetic tape drive (2) | 8.75 | 80 | 1 |
| LSI 11/73 (2) | 5.5 | 35 | 4 |
| DSD-480 floppy disk (2) | 5.5 | 60 | 1.5 |
| Panasonic dual monitors | 8.75 | 27 | .5 |
| Console keyboard | 3.0 | 7 | .5 |
| Camac crate (full) | 12.5 | 105 | 12 |
| Act II Printer (HxWxD) (2) | 8.2 x 22 x 17.9 | 40 | 3 |
| Total | | 569 | 32 |

can be used as a totally independent data acquisition system with limited real-time display capabilities. In fact, the boards have been configured inside each LSI (figure 3) so that minimal changes would be necessary for fall back to a one computer system.

| | | |
|---|------------------------------|--------------------------|
| 1 | M 8192 CPU | DSD-480 FLOPPY INTERFACE |
| 2 | DA11 BOI INTERPROCESSOR LINK | |
| 3 | DQ130 MAG TAPE INTERFACE | |
| 4 | CAMAC INTERFACE | |
| 5 | DRVII - C @ 70 | DRVII - C @ 60 |
| 6 | DRVII - C @ 50 | DRVII - C @ 40 |
| 7 | LP II | DLVII - J |
| 8 | M8059 MEMORY (128 K) | TCU 50 - DYP |

| | | |
|---|------------------------------|----------------------------|
| 1 | M 8192 CPU | DSD - 480 FLOPPY INTERFACE |
| 2 | DA11 BOI INTERPROCESSOR LINK | |
| 3 | MATROX QRGB - GRAPH | |
| 4 | JFEP-II FRONT END PROCESSOR | |
| 5 | DLVII - J | JFEP-II SLU |
| 6 | LP II | TCU - 50 |
| 7 | | M 8059 MEMORY (128K) |
| 8 | | |

Figure 3. Internal computer configurations.

Table 2a shows connections from the two LSI's. LSI #2 houses spare boards which need not be connected to anything at present. Table 2b shows various other connections that need be made in order to get the DAS up and running. Table 3 lists the necessary connections to the digitizers. The first item on 2b is a "daisy chain" connection between the two Cipher tape drives. The Cipher 880 manual shows no twist for these cables

Table 2a. DAS component interconnections.

| LSI #1 Board | Connector Type | Destination |
|------------------------------------|---|--|
| DSD-480 floppy interface | 26p flat cable | DSD-480 #1 |
| DA11BOI interprocessor link | dual 50p flat cables | LSI #2 DA11BOI (P1→P2; P2→P1) |
| DQ130 magtape interface | dual 50p flat cables | Cipher #1 (J1→P2; J2→P1) |
| Camac crate interface | 50p flat cable | Camac crate |
| DRV11-C digital interface (@50) | 40p flat cable (customized) | A/D interface (N. McRae design) |
| DRV11-C digital interface (@60) | 40p flat cable (customized) | Energy monitor (R. Allen design) |
| DRV11-C digital interface (@70) | 40p flat cable (customized) | Nav interface (N. McRae design) |
| LP11 line printer controller | 36p flat cable | Act II printer |
| DLV11-J serial line interface | 2p EIA (port 4) 2p EIA (port 1) 2p EIA (port 2) | Ann Arbor LSI #2 DLV11 (port 4) JFEP-11 SLU |
| LSI #2 Board | Connector Type | Destination |
| DSD-480 floppy interface | 26p flat cable | DSD-480 #2 |
| DA11BOI interprocessor link | dual 50p flat cables | LSI #1 DA11BOI |
| Matrox ORGB-Graph | 75 Ω BNC cable | Panasonic #2 |
| LP11 line printer controller | 36p flat cable | Act II printer |
| DLV11-J serial line | 2p EIA (port 4) | LSI #1 DLV11 (port 1) |
| JFEP-11 SLU | 2p EIA | LSI #2 DLV11 (port 2) |
| JFEP-11 | 50p flat cable | JFEP-11 SLU |

Table 2b. Other interconnections.

| Source | Connector Type | Destination |
|---------------------|--------------------------------------|-----------------------------|
| Cipher #1 | 50p dual flat cables (half twist) | Cipher #2 (P1→P1; P2→P2) |
| Ann Arbor interface | 26p flat cable | keyboard |
| | BNC cable | Panasonic #1 |
| | power cable | Power supply |

Table 3. Impedences for digitizer connections.

Transiac Internal 50 Ω

| | |
|-----------|---|
| Trigger | N |
| Time Base | Y |
| Input | Y |
| Amp Input | Y |

Available Connections for Digitizers

Lase-Coherent trigger
Master Control trigger
T-O markers (positive)
T-O markers (negative)
Diode clippers

but we found a half twist was necessary to make the tape drives function properly. Also, the manual says that only the last unit in the chain should be terminated but we have found that when this is done you cannot turn off one unit (to clear an error) without affecting the other so both our units are terminated. Cipher #2 must have its unit number changed to two to make this configuration work.

The Ann Arbor keyboard/display has functioned reliably and yields good quality characters. The display, however, is large and bulky. A VK-170 (DEC) keyboard kit was tried but the lettering was poor and characters were often thrown out to the screen at random. A new keyboard kit is being investigated but for now the Ann Arbor keyboard and its interface board are being used. The interface board is mounted in a separate box with an external power supply (drawn from LSI #1 chassis).

DIAL DAS PROGRAM THEORY

The NASA multipurpose DIAL DAS has been developed toward optimizing the following:

1. Speed. The DIAL DAS must be able to digitize and store 8192 words at up to 10 Hz rates as well as retrieve other information such as navigation, laser energies, and meteorological data. All this data must be read into computer memory (possibly averaged) and then recorded to magnetic tape prior to the next laser fire. To accomplish this, DMA (direct memory access) devices were chosen. Timing tests show that it takes about 16 msec to store 2000 words from the Transiac 2012 digitizer. To record the data, streamer tape speeds are a necessity (for 8192 words and 10 Hz). Since tape units take about 3 minutes to rewind, two streamer tape drives are necessary to avoid interruptions in the data.

2. Size. Since the LaRC DIAL system is mainly an airplane platform system, size is a major consideration in DAS hardware. The current DIAL DAS is half the size of what it was five years ago with more than three times the computer capability.

3. Program control. Some experimenters prefer the type of computer system which, once started, runs itself with no operator intervention necessary. The DIAL DAS is not that kind of system and, in fact, requires this report and some hands-on experience to operate. The advantage to this type of software is that it allows the experimenter to have maximum control over real-time data acquisition and display. Near instantaneous modifications can be made to both using the commands detailed in the section "Keyboard Commands".

4. Data display. There are three purposes to the DIAL DAS data display. When starting out on a mission a fast refresh plotting capability is needed to align and optimize returns. When a dial or a mirror is turned we need near instantaneous display of that adjustment. As the mission proceeds we need the capability to monitor our returns but the refresh cycles are not so important. At this time, however, we need the capability to do some processing of the data to determine ozone and relative aerosol concentrations. We cannot expect to do all necessary corrections to the data in a real-time situation, so the software has been written to do as much as possible in the one second refresh time allotted. As an example, ozone concentrations can be calculated but the aerosol correction is not performed. Hard-copy color maps of aerosol concentrations have been extremely useful in DIAL missions in determining aerosol layers and subsequent flight altitudes in and around those layers. The third purpose to the data display is diagnostics. There are times when we need to look at the returns in a number of different ways in order to determine why we are getting errors in our concentrations. If the problem turns out to be something like mis-alignment, the beams can be re-aligned and the data for the mission can be salvaged.

The DIAL DAS has four data display capabilities. The CRT keyboard monitor can be used to list out raw data, the current

banner record (a record consisting of experimental parameters) or the current plotting options. The second CRT monitor is used for plotting data returns in a number of viewing modes. There are also two color printers, one which is used to generate real-time aerosol concentrations in a 3-D type display and the other is used to generate real-time ozone concentrations in a similar display mode. The second printer can also be used to copy any CRT display. The advantage of having all these display modes is two-fold: (1) maximum control over experiment objectives, and (2) hard-copy data format for post-mission debriefings. The disadvantage is that the DIAL DAS software is long (requires most of the 128K word memory on both computers) and involved (not easily interpreted by other programmers).

Ideally, it would be desirable to see all the data inputs at any processing level on a shot by shot basis but this is usually not possible in a real-time situation. As an example, we used to have two modes of calculating ozone concentrations for CRT display. One mode does a shot-by-shot calculation averaging in each successive concentration. This allows the user to see an updating and converging average and when the specified averaging interval is complete error bars are also shown. To perform the ratios and logarithms each time requires considerable CPU time (about .8 seconds on the LSI 11/73). The other mode averages all the on-line returns and all the off-line returns and does only one DIAL calculation at the end of the specified averaging interval. In this mode, the screen remains empty during the averaging process and no error bars can be calculated, however, the computation is done in about half the time. In real-time situations there is a trade-off between time required to generate a display versus being able to view the data in the most informative way. With hardware averaging of DIAL returns, we are able to achieve concentration averages using the first method at rates equivalent to that of the second method. The second method is no longer available as an option.

The DIAL DAS display modes will be covered in more detail in the section entitled "Real-Time Data Display" and refresh times are cited for each example shown.

PERIPHERAL PROGRAMMING INFORMATION

Table 4 is a summary of the base registers and trap vectors for all the peripheral devices associated with the two LSI computers. The magtape interface is the only device at BR7 -- the highest priority interrupt. The components marked with an asterisk are spare boards with switch registers set as shown.

Table 4. Base addresses for registers used by peripheral devices.

| Device | Base Address | Trap Vector |
|---------------------------------------|--------------|-------------|
| ----- | | |
| LSI #1 | | |
| Floppy Disk | 777170 | 264 |
| Interprocessor Link | 772410 | 124 |
| Mag-tape Interface | 772520 | 224 |
| Camac Interface | 777550 | 400 |
| *DRV11-C @40 | 767740 | |
| DRV11-C @50 | 767750 | |
| DRV11-C @60 | 767760 | |
| DRV11-C @70 | 767770 | 300 |
| Line Printer Controller | 777514 | 200 |
| Serial Link (Console) | 777560 | 60 |
| Serial Link (to LSI #2) | 776500 | 320 |
| Serial Link (to JFEP-11) | 776510 | 330 |
| TCU 50-DYR | 760770 | |
| LSI #2 | | |
| Floppy Disk | 777170 | 264 |
| Interprocessor Link | 772410 | 124 |
| Matrox | 764400 | |
| Line Printer Controller | 777514 | 200 |
| Serial Link | 777560 | 60 |
| *TCU 50 | 760770 | |
| LSI 11/73 Memory Management Registers | | |
| Page Descriptor | 772300 | |
| Page Address | 772340 | |
| Memory Management 0 | 777572 | |
| Memory Management 3 | 772516 | |
| ----- | | |


On the following pages each of these peripheral devices will be discussed in a little more detail. The intention here is to provide only enough information to determine if a particular device is functioning properly and for more involved programming requirements references are given for each item.

DSD 480 Floppy Disk System


The DSD 480 is a double sided, double density flexible disk system which is RX02 compatible with RT-11 V3B. However, since the existing DIAL computer system is using RT11 V3 internal

switches were set to make it RX01 compatible (single sided, single density). The floppy disk registers are outlined below.

RXICS @ 777170 command and status register
RXIDB @ 777172 data buffer register

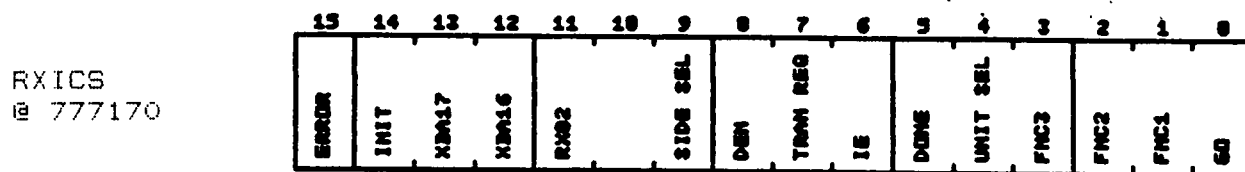

ERROR Error detected.
INIT Initialize the DSD 480.
XBA17,XBA16 Extended address bits.
RX02 RX02 system identification bit.
SIDE SEL Side select: =1 for side 0; =0 for side 1.
DEN Density of the function encoded in FCN1-FCN3.
TRAN REQ Transfer request flag.
IE Allows DONE to interrupt.
DONE Operation completed.
UNIT SEL Drive unit select.
FCN3-FCN1 Function select: 000 fill buffer
001 empty buffer
010 write sector
011 read sector
100 set media density
101 read status
110 write deleted data sector
111 read error code
GO Execute the function.

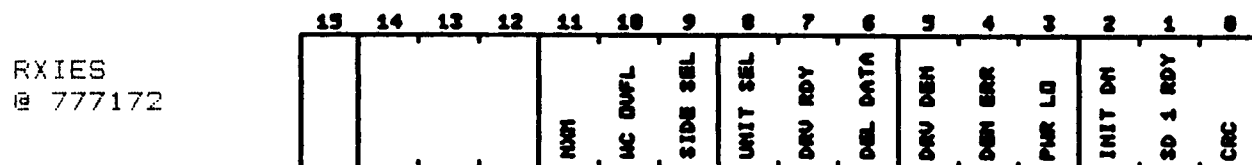

NXM Non-existent memory error.
WC OVL Word count overflow.
SIDE SEL Indicates side selected during last operation.
UNIT SEL Indicates unit selected during last operation.
DRV RDY Drive ready -- disk installed and ready to go.
DEL DATA Deleted data -- indicates deleted data address mark was found on last operation.
DRV DEN Density of diskette.
DEN ERR Diskette density did not match DEN.
PWR LO Power failure in the controller/drive subsystem.
INIT DN Initialize done.

ORIGINAL PAGE IS
OF POOR QUALITY

SD 1 RDY Set for double sided diskette when ready.
CRC Cyclic redundancy error.

Interprocessor Link (DA11BOI)

The Interprocessor Link provides a means of transferring data through DMA between two LSI 11/73 processors. This is the device used by the DIAL DAS software to transfer a data record from LSI #1 to LSI #2 to be processed and plotted.

WCNT @ 772410 word count
ADDR @ 772412 bus address
STATUS @ 772414 control/status
DATA @ 772416 data buffer

STATUS
@ 772414

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-------|-----|------|-------|-------|--------|---------|-------|-------|----|-------|-------|--------|---------|----------|----|
| ERROR | NEX | ATTN | MAINT | IN IR | IN DIR | IN MODE | CYCLE | READY | IE | XBA17 | XBA16 | OUT IR | OUT DIR | OUT MODE | GO |

ERROR Set by NEX, ATTN from the other computer or by bus address overflow.
NEX Non-existent memory.
ATTN Reads ATTN from the other computer.
MAINT Maintenance.
IN IR Input interrupt request. Reads status of the OUT IR from the other computer.
IN DIR Input direction. Reads status of OUT DIR from the other computer.
IN MODE Input mode. Reads status of OUT MODE from other computer.
CYCLE Initiates a DMA transfer when the generating DA11BOI is both the requested computer and the transmitter. When CYCLE and GO are both set, an immediate bus cycle is executed.
READY Must be cleared before a block transfer can be done.
IE Allows READY, IN IR or ERROR to cause interrupt.
XBA17,XBA16 Extended memory bits.
OUT IR Causes IN IR and READY in the other computer.
OUT DIR During block transfer: =0 for transmitter; = 1 for receiver. Must be opposite of IN DIR.
OUT MODE Output mode: =0 for DMA; =1 for program mode.
GO Executes.

Cipher F880 Interface (Dialog DQ130)

Two Cipher F880 tape drives are available for storage of data. This allows for continuous data acquisition when one drive

ORIGINAL PAGE IS
OF POOR QUALITY

is rewinding. The two units are cabled together by a "daisy chain" configuration and interfaced to the LSI 11/73 through a

Dilog D0130 tape coupler. Tape density is determined by a button on each Cipher unit and tape speed is software selectable. The fast speed (100 ips) or streamer mode requires a longer repositioning time if the tape motion stops during read or write operations. The DIAL DAS software must stack data records in extended memory during repositioning times to take advantage of the streamer mode. Tests showed that for 4096 word buffers and 10 Hz DIAL data, 11 or 12 records would get stacked during repositioning. The interface registers are outlined below.


| | | |
|-------|----------|------------------------|
| MTS | @ 772520 | status |
| MTC | @ 772522 | command |
| MTBRC | @ 772524 | byte/record counter |
| MTCMA | @ 772526 | current memory address |
| MTD | @ 772530 | data buffer |
| MTRD | @ 772532 | tape read lines |

MTS
@ 772520

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---------|-----|---------|-----|-----|-----|-----|------|-----|------|------|-----|-----|-----|---|---|
| ILL COM | EOF | PAR ERR | BGL | EOT | RLE | NXM | SELR | BOT | 7 CH | SDWN | WRL | RWS | TUR | | |

| | |
|---------|---|
| ILL COM | Occurs if (a) a new instruction is issued before last one has finished, (b) no write ring when told to write, (c) a command to unit whose SELR is 0, or (d) SELR becomes 0 during tape operation. |
| EOF | Set when end of file is detected during tape operation. |
| PAR ERR | Parity error. |
| BGL | Bus grant late. |
| EOT | End of tape marker detected. |
| RLE | Record length error -- detected during read operations if tape record is too long. |
| NXM | Non-existent memory. |
| SELR | Indicates unit addressed is on-line. |
| BOT | Beginning of tape. |
| 7 CH | Set to indicate 7-channel tape unit. |
| SDWN | Will accept new command during settle down as long as it is in the same direction. |
| WRL | Write lock set if no write ring is on tape. |
| RWS | Rewind status set when rewind command given, cleared at BOT. |
| TUR | Tape unit ready is cleared by GO and function occurs. |

MTC
@772522

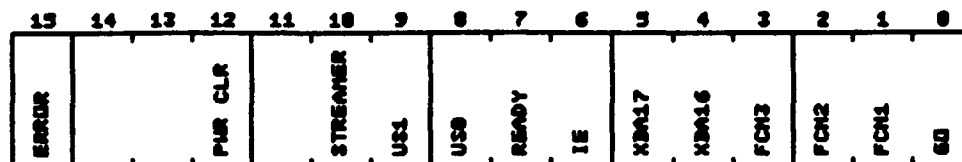

ERROR Set by bits 7-15 of the status register.
PWR CLR Clears the control unit and tape units.
STREAMER Selects streamer mode.
US1,US0 Selects unit number for MTS operation.
READY Control unit ready.
IE Interrupt enable.
XBA17,XBA16 Extended memory bits.
FCN3-FCN1 Function bits (with GO set):
000 (1) Off line
001 (3) Read
010 (5) Write
011 (7) Write EOF
100 (11) Space Forward
101 (13) Space Reverse
110 (15) Write with Extended Interrecord Gap
111 (17) Rewind
GO When set, begins operation defined by function.

Camac Interface (Kinetics 2920-Z2B bus adaptor)

The Transiac 2012S digitizers are interfaced to the LSI 11/73 through a Kinetics 3920 Crate Controller and a Kinetics Bus Adaptor board. The interface is versatile in that any unit in the Camac crate can be addressed by its slot number. The function codes will be defined by the type of hardware being used in that slot. Since this interface is presently being used only for the Transiac digitizers, only those function codes will be listed here. The interface has four directly addressable registers plus an additional 6 registers addressed by offsets.

| | | | |
|--------|----------|--------------------|--------------------|
| DLO | @ 777550 | data low | (RA2 = 0, RA1 = 0) |
| LLO | | lam low | (RA2 = 0, RA1 = 1) |
| MAR | | memory address | (RA2 = 1, RA1 = 0) |
| DMACSR | | DMA control/status | (RA2 = 1, RA1 = 1) |
| DHI | @ 777552 | data high | (RA2 = 0, RA1 = 0) |
| LHI | | lam high | (RA2 = 0, RA1 = 1) |
| WCR | | word count | (RA2 = 1, RA1 = 0) |
| EMA | | extended memory | (RA2 = 1, RA1 = 1) |
| NAF | @ 777554 | station/function | |
| CACSR | @ 777556 | control/status | |

NAF
@ 777554

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-------|----|-------|-------|-------|-------|-------|-----|-----|-----|-----|------|------|------|------|------|
| ASCAN | | SLOT4 | SLOT3 | SLOT2 | SLOT1 | SLOT0 | SA3 | SA2 | SA1 | SA0 | FCN4 | FCN3 | FCN2 | FCN1 | FCN0 |

ASCAN

Enables the crate controller to increment the Camac address on completion of a Dataway Cycle.

SLOT0-SLOT4

Station or slot number of Camac device.

SA0-SA3

Sub-address of Camac device (not used with Transiacs.)

FCN0-FCN4

Function code defined by user device.

Transiac Function Codes

F(0)*A(0)

Reads LAM register and record length.

F(1)*A(0)

Reads number of sweeps completed.

F(2)*A(0)

Reads signal averaged data. Cannot be executed until signal averaging disabled.

F(8)*A(0)

Tests LAM and returns Q = 1 if ready for readout.

F(9)*A(0)

Resets module; clears averaging memory to zero; enables averaging memory.

F(10)*A(0)

Resets LAM.

F(16)*A(0)

Sets the record length register.

F(16)*A(1)

Writes address of the first data word to be read from averaging memory (must be executed twice). A record length of 4K is selected by 100(octal) in DLO register.

F(17)*A(0)

Sets the sweep register.

F(24)*A(0)

Disables LAM.

F(24)*A(1)

Disables averaging and generates a LAM.

F(26)*A(0)

Enables LAM to become active on dataway.

F(26)*A(1)

Enables averaging.

Z,C

Clear and reset; same as F(9)*A(0).

CACSR
@ 777556

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---------|-------|------|------|----|------|-----|-----|------|----|-------|-------|---------|----------|---|----|
| ON-LINE | L-SUM | NO-Q | NO-X | | N>23 | RA2 | RA1 | DONE | IE | SET Z | SET C | SET INH | READ INH | | GO |

ON-LINE (R)

True when 3920 is powered and on-line.

L-SUM (R)

True if any LAM is set in crate (causes interrupt).

NO-Q (R/W)

Updated by 3920 during every Dataway Cycle.

NO-X (R/W)

Updated by 3920 during every Dataway Cycle.

N>23 (R)

During address scan operations, indicates the slot number has been incremented past 23.

RA2,RA1 (R/W)


Used to select registers defined above.

DONE (R)

True when 3920 has completed a programmed control

operation (i.e. non-DMA).
 When set, allows L-SUM to cause interrupt.
 IE (R/W) Dataway initialize.
 SET Z (W) Dataway clear (does not affect registers).
 SET C (W) Sets state of Dataway inhibit line.
 SET INH (R/W) Reflects status of Dataway inhibit line.
 READ INH (R) Starts 3920 operation defined in NAF and DMACSR.
 GO (W)

DMACSR
 @ 777550
 RA2 = 1
 RA1 = 1

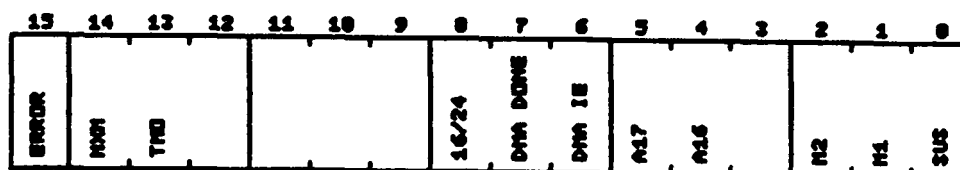


ERROR (R) Set by NXM, NO-X, N>23, or TMO; cleared by INIT or GO.
 NXM (R) DMA transfer to non-existent memory attempted.
 TMO (R) Time-out condition during Q-Repeat DMA mode (mode 3).
 16/24 (R/W) Specifies 16 or 24 bit data transfers (16-bit = 1).
 DMA DONE (R) Set when DMA operation is done.
 DMA IE (R/W) Enables DMA DONE to interrupt.
 A17,A16 (R/W) Extended memory bits used with MAR during DMA.
 M2,M1 (R/W) Specify mode when GO of CACSR is set.
 mode 0 programmed transfer
 mode 1 Q-stop/stop on word count
 mode 2 address scan
 mode 3 Q-repeat/stop on word count
 SUS (R/W) Set to suspend DMA operation.

Parallel Line Interface Module (DRV11-C)

This module acts as an interface between the LSI 11/73 and a peripheral device. The DIAL DAS presently uses one of these modules to pass data from the LORAN or INS interface to the computer, one to transfer digital laser energy readings and one to transfer temperature and altitude information from aircraft systems. The X represents 5, 6 or 7 depending on which DRV11-C is being addressed.

DRSR @ 7677X0 control/status
 DRO @ 7677X2 output buffer
 DRI @ 7677X4 input buffer

DRSR
 @ 7677X0

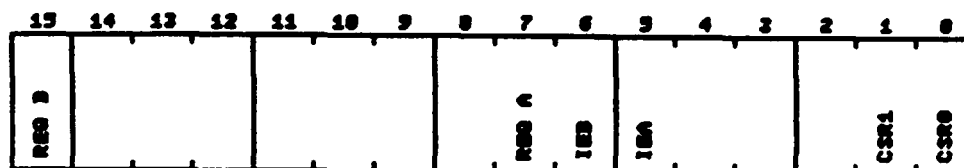


REQ B Set by user device and causes interrupt if IEB set.

REQ A Set by user device and causes interrupt if IEA set.
 IEB Interrupt enable for REQ B.
 IEA Interrupt enable for REQ A.
 CSR1 User defined function -- if linked to another
 DRV11-C causes REQ B.
 CSR0 User defined function -- if linked to another
 DRV11-C causes REQ

Analog-to-Digital Converter (ADV11-C)

Sixteen Analog-to Digital Conversion single ended inputs (or eight differential) are available to the DIAL DAS through an ADV11-C board. Unipolar inputs can range from 0V to 10V and bipolar inputs from -10V to +10V and can be stored with programmable gains of 1, 2, 4, or 8 times the input voltage. This board is not being used in the system presently.

ADST @ 770400 control/status
 ADBF @ 770402 data buffer

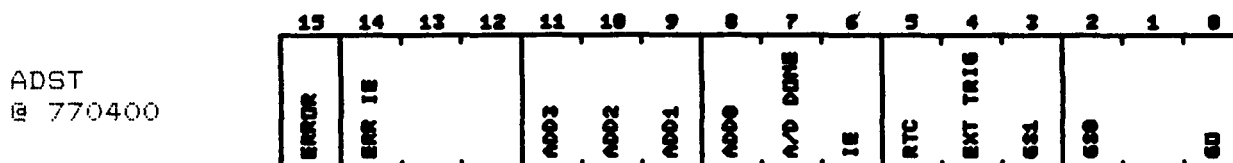


ERROR Caused by doing a GO when A/D DONE is set or A/D still in progress.
 ERR IE Allows ERROR to interrupt.
 ADD3-ADD0 Channel address.
 A/D DONE Set when A/D done, cleared by reading A/D data buffer.
 IE Interrupt enable.
 RTC Enables real-time-clock input to start A/D conversion.
 EXT TRIG When set allows external trigger to start A/D.
 GS1-GS0 Gain select: 00=1, 01=2, 10=4, 11=8.
 GO Starts an A/D conversion -- cleared after starting.

Line Printer Controller (MLSI-LP11)

The LP11 provides the interface between the LSI 11/73 computers and the ACT II printers. Each computer has its own interface board.

LPS @ 777514 status
 LPB @ 777516 data buffer

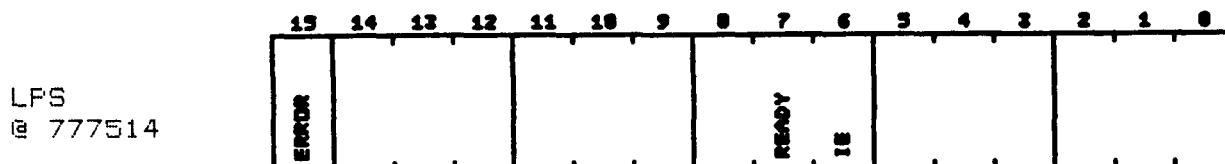

Teletype (Plessey FM-DLV11J Serial Line Interface)

The Plessey FM-DLV11J is a 4-channel asynchronous serial line interface between the LSI 11/73 bus and standard I/O devices. On LSI #1 one port is used to communicate with the teletype, a second port is used to communicate with a second FM-DLV11J interface on LSI #2 and a third port is used to communicate with the JFEP-11 through its SLU board. Baud rates on both boards have been wire-wrapped for 9600 baud.


From LSI #1 port #1 to LSI #2 port #4 (X=0) and from LSI #1 port #2 to JFEP SLU (X=1):

| | | |
|------|----------|----------------------------|
| RCSR | @ 7765X0 | receiver control/status |
| RBUF | @ 7765X2 | receiver buffer |
| XCSR | @ 7765X4 | transmitter control/status |
| XBUF | @ 7765X6 | transmitter buffer |

From LSI #1 port #4 to console device:


| | | |
|------|----------|----------------------------|
| RCSR | @ 777560 | receiver control/status |
| RBUF | @ 777562 | receiver buffer |
| XCSR | @ 777564 | transmitter control/status |
| XBUF | @ 777566 | Transmitter buffer |

RCSR
@ 776500
@ 776510
@ 777560

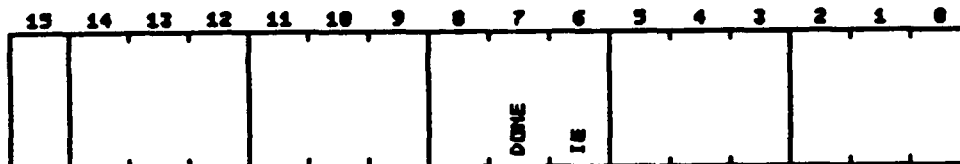


DONE Set when entire word has been received and is ready for transmission.
IE When set, allows DONE to cause interrupt.

RBUF
@ 776502
@ 776512
@ 777562

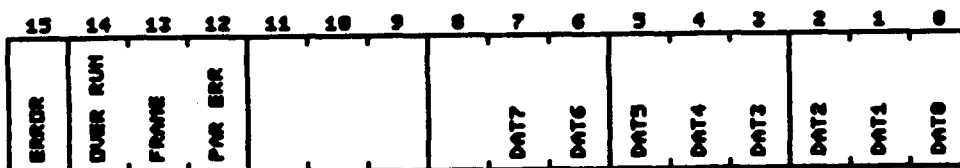

ERROR Set by bits 14,13, or 12.
OVER RUN Set when previous character was not completely read prior to receiving a new character.
FRAME Set when no valid stop bit for character.
PAR ERR Parity error.
DATA7-DATA0 Received data bits.


XCSR
@ 776504
@ 776514
@ 777564

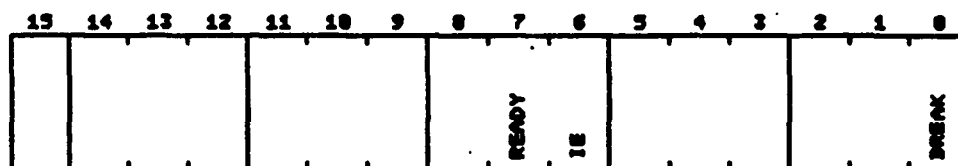

READY
IE
BREAK

Set when XBUF is ready to receive another character.
Enables READY to cause interrupt.
When set, causes a continuous space level to be transmitted.

XBUF
@ 776506
@ 776516
@ 777566

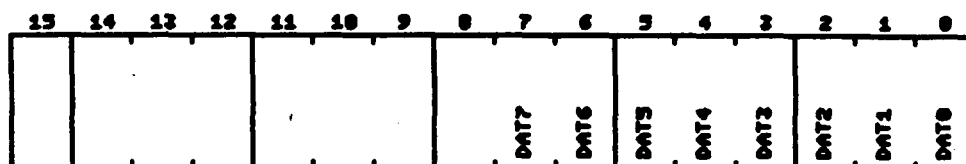


DAT7-DAT0 Transmitter data bits.

Timing Control Unit (TCU-50 and TCU-50 DYR)


These two timing control units are similar in that they are both crystal clocks that continue to operate even after the computer has been powered down. The TCU-50 has month, day, hours, minutes and seconds while the TCU-50 DYR also has year, day of week as well as .1, .01 and .001 seconds. The two clocks are set and read differently so both are outlined below. The TCU-50 DYR is used in LSI #1 while the TCU-50 resides in LSI #2 but is not currently being used by the DIAL DAS -- it is maintained for back-up purposes.

TCU-50:


MNTH/DAY
@ 760770

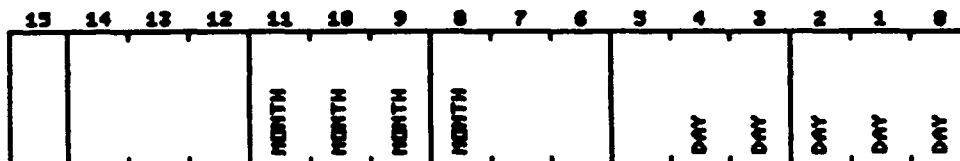


HR/MIN
@ 760772

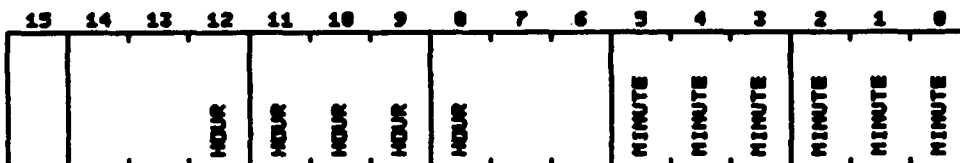

SECND
@ 760774

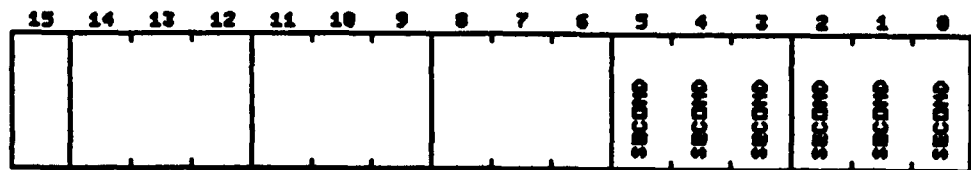

STATUS
@ 760776

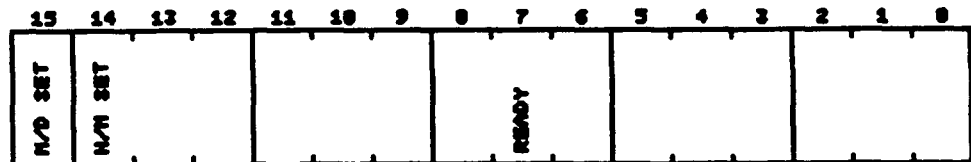


M/D SET
H/M SET
READY

Month/day being set -- fast clock on.
Hour/minute being set -- fast clock on when 1.
TCU ready.

TCU-50 DZR:


DATA
@ 760770

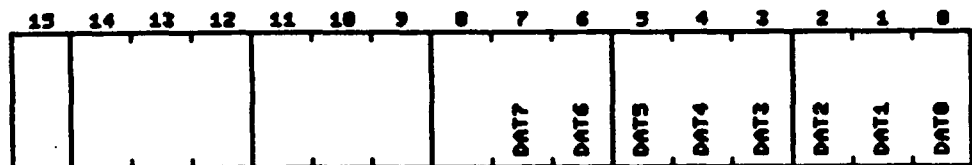

DAT7-DAT0

Read/write data bits. When reading a counter or latch register, the bits are 2 BCD numbers packed in 8 binary bits (eg. 23 = 00010011 = 0001 0011 = 13).

CTRL
@ 760772

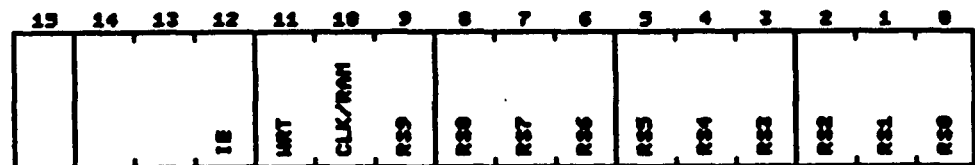

IE
WRT

Interrupt enable if switch SW3-1 is on.
Write enable -- allows writing to the clock or RAM registers.

CLK/RAM

If this bit is 0, then bits 0-4 select one of the 32 clock registers. If 1, then bits 0-9 select one of the 1024 CMOS RAM registers.

RS9-RS0

Register select:
00000 counter - .001 secs
00001 counter - .1 and .01 secs
00010 counter - secs
00011 counter - mins


| | |
|-------|--------------------------------|
| 00100 | counter - hours |
| 00101 | counter - day of week |
| 00110 | counter - day of month |
| 00111 | counter - month |
| 01000 | latch - .001 secs |
| 01001 | latch - .1 and .01 decs |
| 01010 | latch - secs |
| 01011 | latch - mins |
| 01100 | latch - hours |
| 01101 | latch - day of week |
| 01110 | latch - day of month |
| 01111 | latch - months |
| 10000 | interrupt status register (R) |
| 10001 | interrupt control register (W) |
| 10100 | status bit |
| 10101 | GO command |
| 10110 | standby interrupt |

Matrox ORGB-GRAPH Controller

The Matrox ORGB-GRAPH controller is a color graphics interface for use with RGB monitors. Contained in a PROM is a color look-up table which has been modified by Norman McCrae for gray-scale operations. I have written general purpose software routines to be used with the Matrox board to draw axes, point plots, vector plots and draw characters. There are 512 x 512 pixels available but due to some flaw in the design of the Matrox board the software only uses 256 pixels in the Y direction. There are 11 directly accessed registers plus 14 CRTC registers that are indirectly accessed through an address register (VECT) and data port (CRT5). The CRTC registers will not be discussed here -- they are used only for initialization procedures and their use can be found in the Matrox manual. Not all mnemonics for the directly accessible registers will be defined in this report as they are not used in the DIAL DAS software.

| | | |
|----------|----------|-----------------------------------|
| XREG | @ 764400 | X coordinate (10 bits) |
| YREG | @ 764402 | Y coordinate (10 bits) |
| DATA | @ 764404 | data register (4 bits) |
| ST1 (R) | @ 764406 | preset memory status |
| CTR1 (W) | @ 764406 | zoom/pan control |
| ALP (R) | @ 764410 | auxiliary light pen register |
| CTR3 (W) | @ 764410 | color map select |
| CTR4 | @ 764412 | write plane enable |
| ST2 (R) | @ 764414 | vertical blanking status |
| VECT (W) | @ 764414 | CRTC address/vector register |
| CTR5 | @ 764416 | CRTC data register/preset control |


ST1
@ 764406

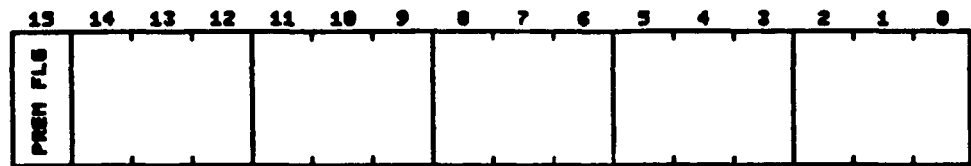

PREM FLG

If 1, memory is being preset or frame grab in progress.

CRT1
@ 764406

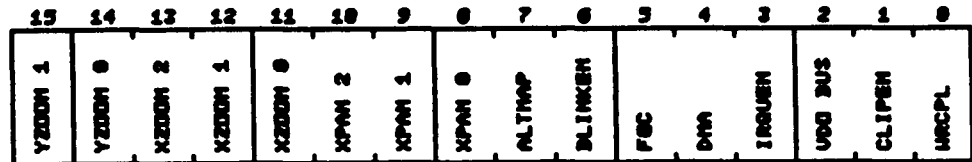

YZOOM1-YZOOM0

Y-zoom: 00 = 1, 01 = 2, 10 = 4

XZOOM2-XZOOM0

X-zoom: 111 = 1, 110 = 2, 101 = 3, 100 = 4,
011 = 5, 010 = 6, 001 = 7, 000 = 8

XPAN2-XPAN0

Horizontal display pan delay.

ALTMAP

Selects A or B color-look-up table.

BLINKEN

When set, blinks display.

FGC

Continuous frame grab (not used).

DMA

When 1, the display memory can be accessed by DMA.

IRQEN

Interrupt enable.

VDO BUS

Video bus enable when 0.


CLIPEN

Clipping enabled when 1.

WRCPL

Data at X,Y is complemented when 1.

VECT
@ 764414

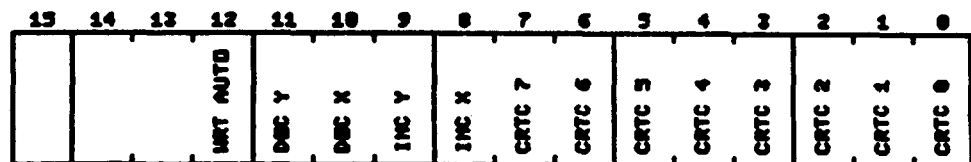

WRT AUTO

When 0, data in DATA is automatically written to X,Y when VECT is loaded.

DEC Y

When 1, auto-decrement of Y is in effect.

DEC X

When 1, auto-decrement of X is in effect.

INC Y

When 1, auto-increment of Y is in effect.


INC X

When 1, auto-increment of X is in effect.

CRTC7-CRTC0

Address of CRTC register (used only at start-up).

CRT5
@ 764416

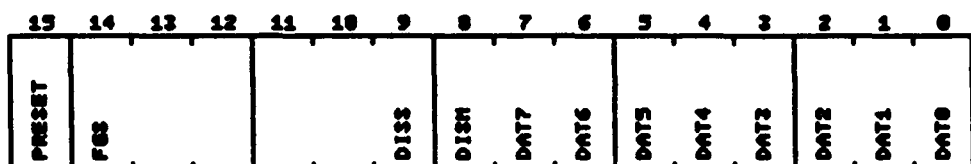

PRESET When 1, the part of display memory appearing on the screen is preset to the value in DATA.
 FGS Frame grab control.
 DATA7-DATA0 Data port to and from the CRTC registers.

JFEP-11 Front-End Processor

The JFEP-11 is a front-end processor using a J-11 chip which plugs into a Q-bus backplane. It has 256K words of dual ported memory which may be accessed through the Q-bus. The Q-bus may only access 128K of the J-11 memory at a time. The lower range or upper range of J-11 memory is selected through a bit in the Q-bus CSR. Programs for the JFEP-11 are developed, compiled and linked on the LSI computers. To load a JFEP-11 program, the program is loaded into the memory of LSI #2 with the lower range of J-11 memory selected. To run the program on the JFEP-11, LSI #1 communicates with ODT on the J-11 board by loading the program counter register (R7) with the starting address of the J-11 program then sending a "P" which is the ODT command to proceed at the address pointed to by the program counter.

The DIAL DAS uses the JFEP-11 to perform a running average on the ozone profiles either above or below the aircraft. In order to do the running average, all shots must be maintained in memory so that one may be subtracted off the front end when a new one is added to the existing average. This requires all the memory available on the JFEP-11.

These registers are not presently used in the DIAL DAS software and are included because they will probably be used in future revisions.

@ 762004 (Q-Bus) Q-Bus CSR
 @ 777740 (J11-Bus) J11-Bus CSR

@ 762004
 Q-Bus CSR

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|----|----|----|-----|---------|---------|---------|---|--------|--------|--------|--------|--------|--------|--------|----------|
| SS | | | NXM | MEM SEL | DMA ENA | DPM DIS | | VECT 7 | VECT 6 | VECT 5 | VECT 4 | VECT 3 | VECT 2 | VECT 1 | JINT REQ |

SS Stop/Restart J-11 through power fail mode. Cleared by writing a zero or power fail acknowledged.
 NXM Non-existent memory status when accessing Q-bus in DMA mode.
 MEM SEL Selects lower memory when clear, upper memory when 1.
 DMA ENA Enables DMA transfers to Q-bus.
 DPM DIS Disables the dual ported memory from the Q-bus.
 VECT J11 vector address which gets shifted by one when sent to the J11 bus, thereby, doubling address in these bits.
 JINT REQ Generates a J11 interrupt request.

J11-Bus CSR
@ 177740

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
|---------|-------|----|----|-----|----|---|-----|---|---------|--------|--------|--------|--------|--------|--------|--------|----------|
| DMA ENA | UBACK | | | GBQ | | | EVT | | REQ DMA | VECT 7 | VECT 6 | VECT 5 | VECT 4 | VECT 3 | VECT 2 | VECT 1 | QINT REQ |

DMA ENA When set, Q-bus has enabled DMA transfers. Read only.
 UBACK When clear, J11 can access Q-bus DMA controller.
 GBQ Grab the Q-bus for transfers between the J11 and Q-bus.
 EVT Used to enable the EVENT line time clock.
 REQ DMA Requests control of the DMA logic.
 VECT Vector address for the Q-bus, shifted by one.
 QINT REQ Used to generate an interrupt request to the Q-bus.

LSI 11/73 Memory Management Registers

There are many registers internal to the LSI CPU's which will not be discussed here. The registers described below are all concerned with memory management and are included in this document because they are used extensively in the DIAL DAS software. Only the bits that are used will be defined here.

PDR @ 772300 page descriptor
 PAR @ 772340 page address
 MMRO @ 777572 memory management register 0
 MMR3 @ 772516 memory management register 3

PDR
@ 772300

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---------|-------|-------|-------|-------|-------|-------|-------|---|---|---|---|---|---|---|---|
| BYP CAC | PLF 6 | PLF 5 | PLF 4 | PLF 3 | PLF 2 | PLF 1 | PLF 0 | | | | | | | | |


BYP CAC Bypass cache.
 PLF Page length field.

PAR
@ 772340

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| PAF 15 | PAF 14 | PAF 13 | PAF 12 | PAF 11 | PAF 10 | PAF 9 | PAF 8 | PAF 7 | PAF 6 | PAF 5 | PAF 4 | PAF 3 | PAF 2 | PAF 1 | PAF 0 |

PAF Page address field. Address to be relocated. The actual address that is relocated is the PAF+00. A 200 PAF represents an address of 20000.


@ 777572
MMR0

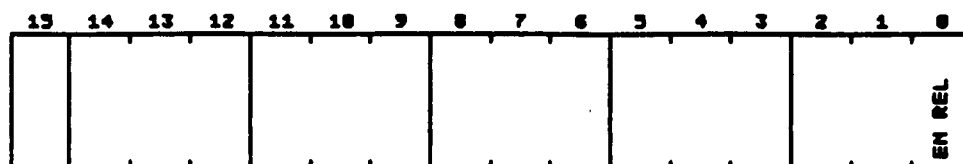

EN REL

Enable relocation when set to 1.

@ 772516
MMR3

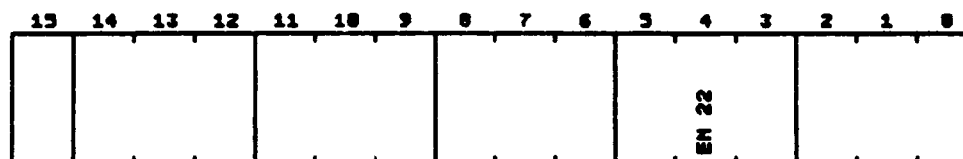

EN 22

Enable 22-bit addressing.

DIAL DAS SOFTWARE

The DIAL DAS Operating System (OS) software consists of three programs which run simultaneously on the two LSI processors and the JFEP-11 processor. The program on LSI #1 is called "MASTER" and is dedicated to data transfer and storage. The LSI #2 program is called "SLAVE" and is responsible for data analysis and display. The program on the JFEP-11 is called J11 and does the DIAL calculation on an on-line and off-line pair then performs a running average of these profiles. The user communicates with all three programs through LSI #1 which passes data buffers and display options to LSI #2 and the JFEP-11 as necessary. Figure 4 shows the interconnection among the three programs running on the three processors. During real-time experimental situations, the MASTER program gathers digitized laser signals from the Transiac 2012S's. It also gathers laser energies through a DRV11-C interface, temperatures and pressure altitude through a second DRV11-C interface, time of day from the TCU-50 DYR, and position information from the Loran or INS navigation devices through a third DRV11-C. Data acquisition is interrupt driven by the Lase Coherent Trigger into the Transiacs. After the data is packed into one continuous buffer, the record is written to magnetic tape. If LSI #2 has finished processing the previous laser shot, the new data buffer is transferred to LSI #2 from LSI #1 through a DMA interprocessor link. The on-line and off-line pair to be processed is sent to the JFEP-11 through J11 dual ported memory on LSI #2. The CRT display rate in real-time depends on the amount of data to be plotted and on the complexity of the data analysis to be performed. For example, at 5 Hz laser firing, 8192 words of raw data from one unit (no analysis) will be viewed every fourth shot. Real-time profiles of ozone or water vapor concentrations are updated every fifth shot. These displays of raw and processed DIAL information allow for real-time system optimization as well as flight path decisions during flight operations. Display rates on the two ACT II printers are governed by operations on their respective processors. The range-squared aerosol color maps are performed by LSI #1 and we typically do a 15 shot average (or 3 seconds) before plotting so there is plenty of time to catch each shot, i.e. a 15 shot average represents 3 uninterrupted seconds of data. On the other hand, when we use LSI #2 and the JFEP-11 to perform our running average of ozone plots to the color printer, plotting time (which is done by LSI #2) must be shared with CRT data display and analysis. Depending on the complexity of CRT display, a 60 shot running average may represent a 2 minute or more display in time.

Data transfer operations from the digitizing units are readily accomplished within the minimum 100 ms operation time envelope between laser firings. The lase-coherent time base is designed to key the digitizers to sample for 136.3 usecs (1363 words) of the on-line lase then to go into a "sleep" mode until the off-line lase at which time it restarts the sampling (ref. 3). This avoids the necessity of digitizing long records to acquire the on-line return followed by the off-line return 300 usecs later. Since both sampling intervals are triggered by the

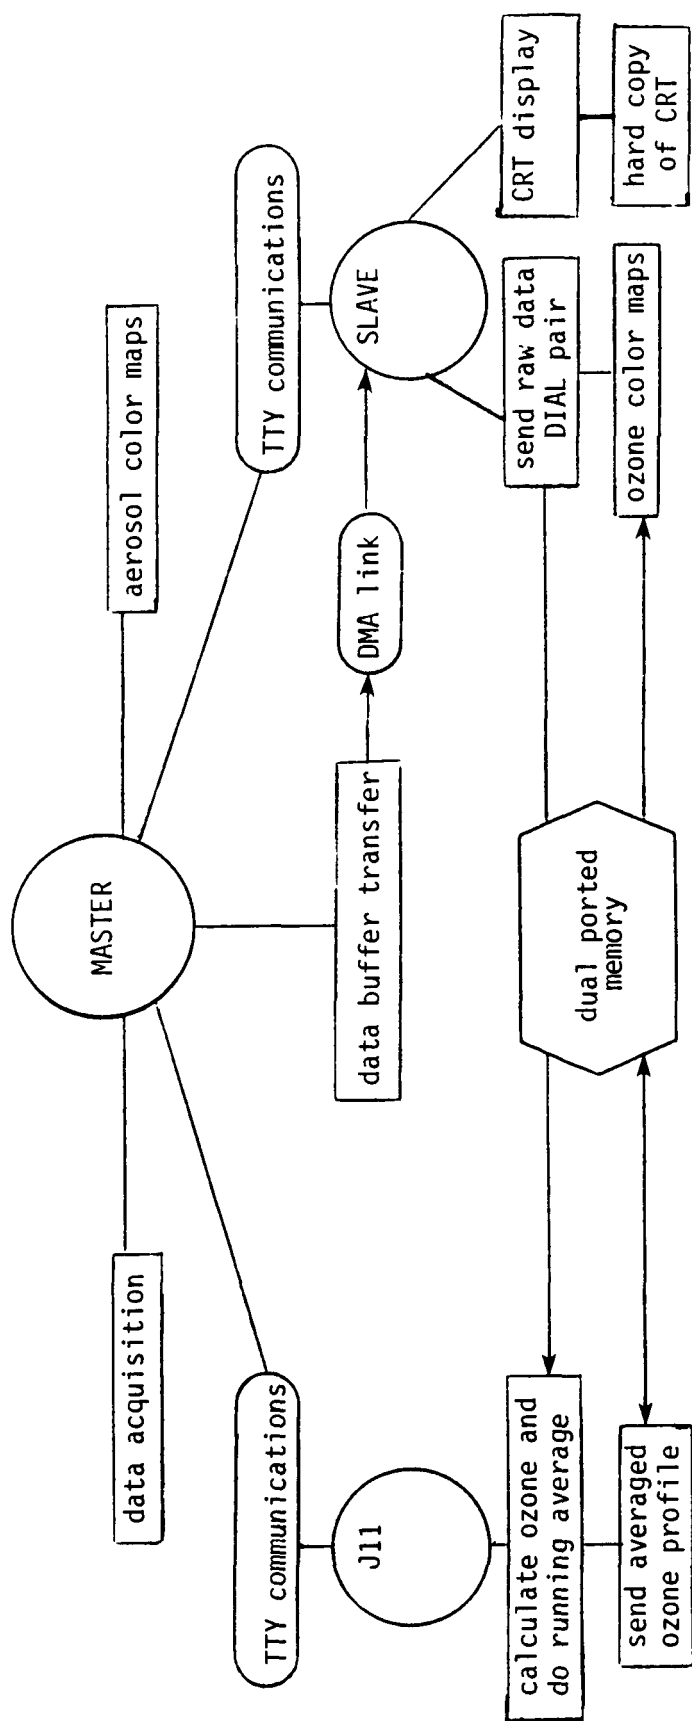


Figure 4. DIAL DAS program interconnections.

actual firing of the lasers through optical sensors, there is more stability of word alignment between the on and off-line returns. Software commands are available which control the starting points and number of words for data storage for each signal return. The maximum buffer size is presently set at 8192 words. The combined data stored from all the digitizers in use plus the shot header information must not exceed 8192 words.

Getting Started

Since the teletype is interfaced to LSI #1, a short program is available on each of the system diskettes which allows the user to communicate directly with LSI #2. Once LSI #1 is booted, type "R LSI2" to access LSI #2. Thereafter, each character is sent through the serial line interface to LSI #2. Similarly, there is a program on each system diskette called JFEP to communicate with ODT on the JFEP-11.

Jumpers have been selected on both LSI's to boot up from disk to RT-11 on power up. To run the MASTER and SLAVE programs, LSI #2 must start out in RT-11. This allows program MASTER to run program SLAVE. The procedure to start up the MASTER/SLAVE programs is outlined below. System diskettes with the RT11 monitor on them have blue labels. The diskettes with the programs "MASTER" and "SLAVE" have yellow labels.

1. Place system diskettes (blue) in drive 0 of both disk drives.
2. Place MASTER (yellow) in drive 1 of LSI #1 and SLAVE (yellow) in drive 1 of LSI #2.
3. Make sure both systems are running RT-11 by pushing the DC ON buttons on both chassis then waiting for the RUN lights to come on and stay lit.
4. Run program MASTER by typing: RUN MASTER
5. MASTER will load and in turn call SLAVE. LSI #2 is ready when "MATROX" is visible on the video display. LSI #1 is ready when the default banner record is printed out on the console display.
6. You are now under the DIAL DAS OS. Anything you type in from now on will be interpreted by program MASTER. To return to the monitor use the instruction KILL. To return to ODT hit the BREAK key.
7. To erase one character hit the "backspace" key. To erase a whole line hit the DEL key.
8. Valid instructions are listed in the section "Keyboard Commands".
9. If LSI #1 bombs, start back at step 3.
10. If LSI #2 bombs to ODT (indicated by "@"), then type BOOT. If LSI #2 bombs to Monitor (indicated by RT-11 error message), type SLAVE.
11. If the display on LSI #2 stops updating, use the SYNC command.

The user now has the capability to fully control data buffering and recording, as well as many other aspects of data analysis and display. A sample user dialogue is given at the end of the section "Keyboard Commands". Comments are made on each line to describe what the user is doing (those preceded by two

hyphens) or what action the computer is taking (comments in parentheses). Commands marked "---*" have arguments which are already program defaults so they did not need to be entered. They are included to demonstrate the use of these commands.

Data Acquisition

Data acquisition is controlled by hardware switches on the digitizing units and by keyboard commands. On the Transiac 2012S a knob setting selects the number of pre-trigger samples in increments of 1/8 of the total record (a selected record length of 4096 words would have pre-trigger increments of 512). A certain number of pre-trigger samples are desirable (about 10 to 20) to provide a good window for the trigger marker but certainly not all 512 of the Transiac pre-trigger words need be saved. There is also the case where a unit is used to digitize only an offline return which occurs some time after that unit was triggered. Only the data from the second return need be saved. The instruction "STORE U1,U2,U3,U4" determines the starting word for each unit at which data is to be saved. For those units storing two returns (both online and offline), the first return is saved starting at U_i and the second return is saved starting at $U_i + 1363$, $i = 1, 2, 3, \text{ OR } 4$. The number of words saved of the first return for each unit is determined by the instruction "WORDS1 U1,U2,U3,U4". Similarly, "WORDS2 U1,U2,U3,U4" specifies the number of words to store of the second return of each unit. The separation between the on and off-line returns has varied from one mission to another so the command "WAKEUP I" can be used to change the value from 1363 to a suitable value. The word number for the "wakeup" can be determined by listing out words of the on-line return and off-line return, determining where the trigger markers are and then adding or subtracting from the existing value to make the two trigger words fall at the same word.

The laser shots can be internally averaged by the Transiac 2012s and 4100. Hardware averaging is a necessity at 10 Hz operations for buffers of 8192 words. The number of shots to average can be selected by the command "DATAVG U1,U2,U3,U4". Each unit should be set to average the same number of shots except when in "STACK" or "TWEAK" modes. The maximum number of shots that can be averaged without overflowing the 16-bit interger is 15. Thus far, we have used a 5 shot (or 1 Hz) averaging option. For most cases, the 1 Hz resolution is more than adequate for our experimental objectives but at times there is a need to obtain a finer resolution of the visible aerosol data. Rather than an increasing storage rates of all digitizing units to a 5 Hz resolution (thereby increasing the amount of data stored by a factor of 5) a special set-up is provided for where the last unit to be sampled can be stacked in memory at the end of the buffer at a different rate than the other three units. There are two restrictions on the use of this procedure. The stacked unit must be the last unit and the resolution of the stacked data must be 5 Hz. Thus, for a 5 Hz laser repetition rate the command "DATAVG 5,5,5,1" and for a 10 Hz rate, the command "DATAVG 10,10,10,2" are valid stacking set-ups (see figure 5). An example of data acquisition will be given at the

| |
|--------------------|
| SHOT HEADER |
| UNIT 1 DATA |
| $\sum_{i=1}^5 T_i$ |
| UNIT 2 DATA |
| $\sum_{i=1}^5 T_i$ |
| UNIT 3 DATA |
| $\sum_{i=1}^5 T_i$ |
| UNIT 4 DATA |
| @T ₁ |
| UNIT 4 DATA |
| @T ₂ |
| UNIT 4 DATA |
| @T ₃ |
| UNIT 4 DATA |
| @T ₄ |
| UNIT 4 DATA |
| @T ₅ |

Figure 5. Stacked data buffer format.

end of the section "Keyboard Commands".

Real-Time Data Display

All data processing and display to the video screen are performed by the SLAVE program on LSI #2. LSI #1 is reserved for data transfer from the digitizers, for magnetic tape operations, and for console keyboard communications. However, on request, LSI #1 will produce real-time color representation of range resolved profiles on the Act II printer. On LSI #2, four basic modes for DIAL data display are available, each with a variety of display options. At the same time several other pieces of information can be shown on the right hand side of the screen. Altitude, temperature data and laser energies from the DRV11-C interfaces can be viewed. Certain hook-up conventions must be observed for the DRV11-C input in order to get default conversion constants and labeling to correspond:

| <u>DRV11-C Channel (@50)</u> | <u>Input</u> | <u>Label</u> | <u>Units</u> |
|------------------------------|----------------------|--------------|--------------|
| 1 | aircraft altitude | ALT | ft |
| 2 | dewpoint temperature | DPT | C |
| 3 | temperature | T | C |
| 4 | total temperature | TT | C |

| <u>DRV11-C Channel (@60)</u> | | | | | |
|------------------------------|-------------|--------------|------|--|----|
| 1 | online UV | laser energy | UVN | | MJ |
| 2 | offline UV | " " | UVF | | MJ |
| 3 | online IR | " " | IRN | | MJ |
| 4 | offline IR | " " | IRF | | MJ |
| 5 | online VIS | " " | VISN | | MJ |
| 6 | offline VIS | " " | VISF | | MJ |

The DIAL DAS command language allows the user to input a slope and intercept to the banner record for each DRV11-C channel to convert the digitized counts to the units shown above. Conversion constants must be input as integers. So each slope and intercept is represented by an integer mantissa and corresponding exponent of 10. These four words per conversion channel are stored in the banner record. The user also has options to update the plot side of the screen (left) by itself, update the right side by itself, or both sides at the same time (UPDATE command).

When the data is being hardware averaged by the digitizers, update of the CRT display is limited to the effective rate of the averaged data. In some cases, a faster update may be necessary so a "TWEAK I" command has been included where unit I will bypass internal averaging to allow for tweaking or optimizing of signals from that unit. To return to normal operations type

"TWEAK 0".

The different display options are summarized on the next page. Each display mode has a number of default options associated with it. These are summarized in table 5. The default values can be changed by various keyboard commands. Display options are available for background subtraction, range-square correction, over-laying data of different digitizers, scale and more. Each display option can be activated or deactivated in real-time to observe signal features in the most useful format.

Table 5. Default plotting parameters (tropospheric set-up).

| PARAMETER | MODE 1 | MODE 2 | OZONE | COMMAND |
|-------------------------|----------|----------|----------|---------|
| unit select | all | all | UNIT1 | UNIT |
| y-axis scale | 0-4096 | 0-4096 | 0-800 | SCALE |
| x-axis scale | all data | 150m/tic | 150m/tic | INDEX |
| background word | 550 | 550 | 550 | BGWORD |
| background window | 50 | 50 | 50 | BGWIND |
| smooth | no | 300m | 300m | SMOOTH |
| average shots | no | no | 300 | PLTAVG |
| range cell | --- | --- | 300m | RNGCEL |
| gas exponent | --- | --- | -10 | GASEXP |
| atmospheric correction | | --- | yes | ATMCOR |
| Rayleigh correction | | --- | -6.7 ppb | RAYCOR |
| shift toa | --- | no | no | SHFTOA |
| update right screen yes | | yes | no | UPDATE |

Raw Data (MODE 1)

This is the basic display mode which presents raw data from each of the digitizing units as it exists in computer memory (figure 6). The abscissa represents word sequence in memory while the ordinate is adjusted to present the 12-bit signal magnitude with variable magnification. The one word instruction "MODE 1" calls up all the options listed as defaults in table 5.

Online/Offline Overlay (MODE 2)

A second display mode presents the raw data signals in an overlapped format. As shown in figure 7, the online and offline return signals from each unit are overlaid. Units 1 and 2 represent UV returns in the nadir and zenith directions respectively. Unit 3 shows the 1060nm aerosol returns -- the zenith and nadir returns have been summed with an analog switch to enable us to digitize with only one unit. Unit 4 shows the 600nm aerosol returns --again these returns have been summed. By default, each of these returns have been smoothed over 300m and plotted as a function of time, each tic mark representing 1 usec. Each data shot is plotted in this mode starting after

ORIGINAL PAGE IS
OF POOR QUALITY

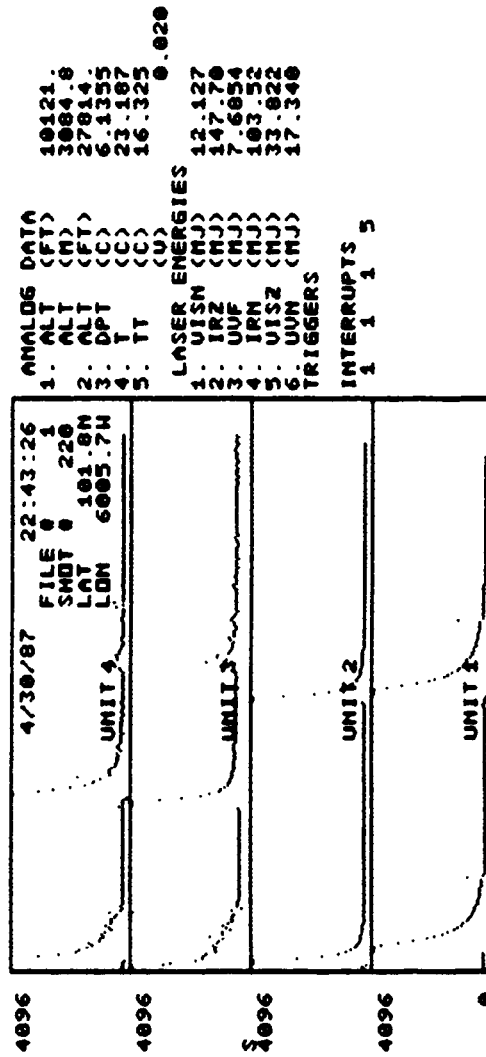


Figure 6. Example of MODE 1 display. Copied to ACT II printer with COPY -1 command.

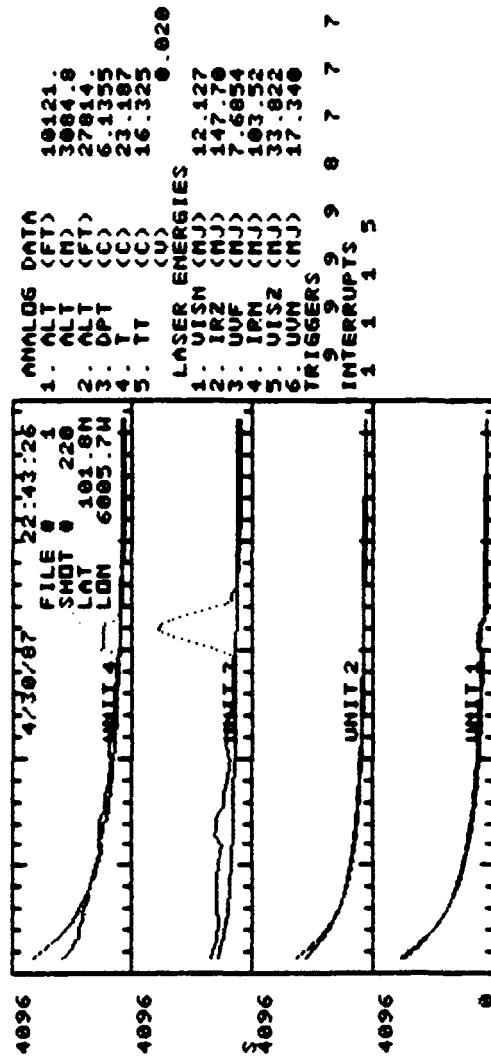


Figure 7. Example of MODE 2 display.

the FMT gate delay. In this mode a search is also performed for a trigger position to line up each of the returns with respect to the laser firings. This trigger position word number is displayed on the right hand side of the screen. The user specifies the trigger ordinate level to be used for each digitizer unit along with the number of words it is nominally delayed. The laser-coherent trigger markers are electronically delayed 14 words from the actual laser firing but a breakthrough pulse occurs at the same word as the laser firing.

Figure 8 shows the effect of activating the background subtraction and range squared options on the profile of UNIT1 in figure 7 (MODE 2). Display of the data in this mode allows us to more readily see the differences in the absorbed on-line return as compared to the off-line return. Figure 9, again shows the effect of activating the subtraction and range squared options. This time the on-line returns of units 3 and 4 have been selected and the overlay option is turned on. From this display we can easily see the response of the two different aerosol wavelengths used -- one being more sensitive to the molecular content of the atmosphere. The sequence of instructions to obtain figure 9 is as follows:

```
MODE 2
RETURN 0,0,1,1
OVLAY 1
RNGCOR 1
YMAX 8192
```

Gray-Scale Display (GRYSCL)

A 16 level gray scale display format is available for presentation of the spatial distribution of aerosol scattering. In processing the aerosol lidar return, the background signal level is subtracted from the lidar-plus-background signal and the geometrical range squared lidar signal dependence is eliminated. The resulting lidar backscatter profile is indicative of the distribution of aerosols along the lidar line-of-sight. The vertical resolution of the aerosol data is 15 m. The nominal horizontal resolution is 10 m for aircraft operation at a 10 Hz repetition rate. The backscatter signal level is converted into a 16 level gray scale display line where stronger scattering is indicated by higher brightness on the monitor or a darker dot pattern on the printed version of the display. Sequential gray scale lines are used to construct a real-time picture of the aerosol vertical distribution along the Electra flight path. Each of the gray scale displays can contain 300 individual or integrated aerosol profiles. At a laser pulse repetition rate of 1 or 10 Hz, the 300 individual profiles correspond to a nominal horizontal traverse of 30 or 3 km, respectively. This horizontal scale assumes a nominal ground speed of 100 m/sec for the Electra aircraft. The gray scale format shows the terrain profile, and it clearly identifies the distribution of aerosols in the boundary layer and the free

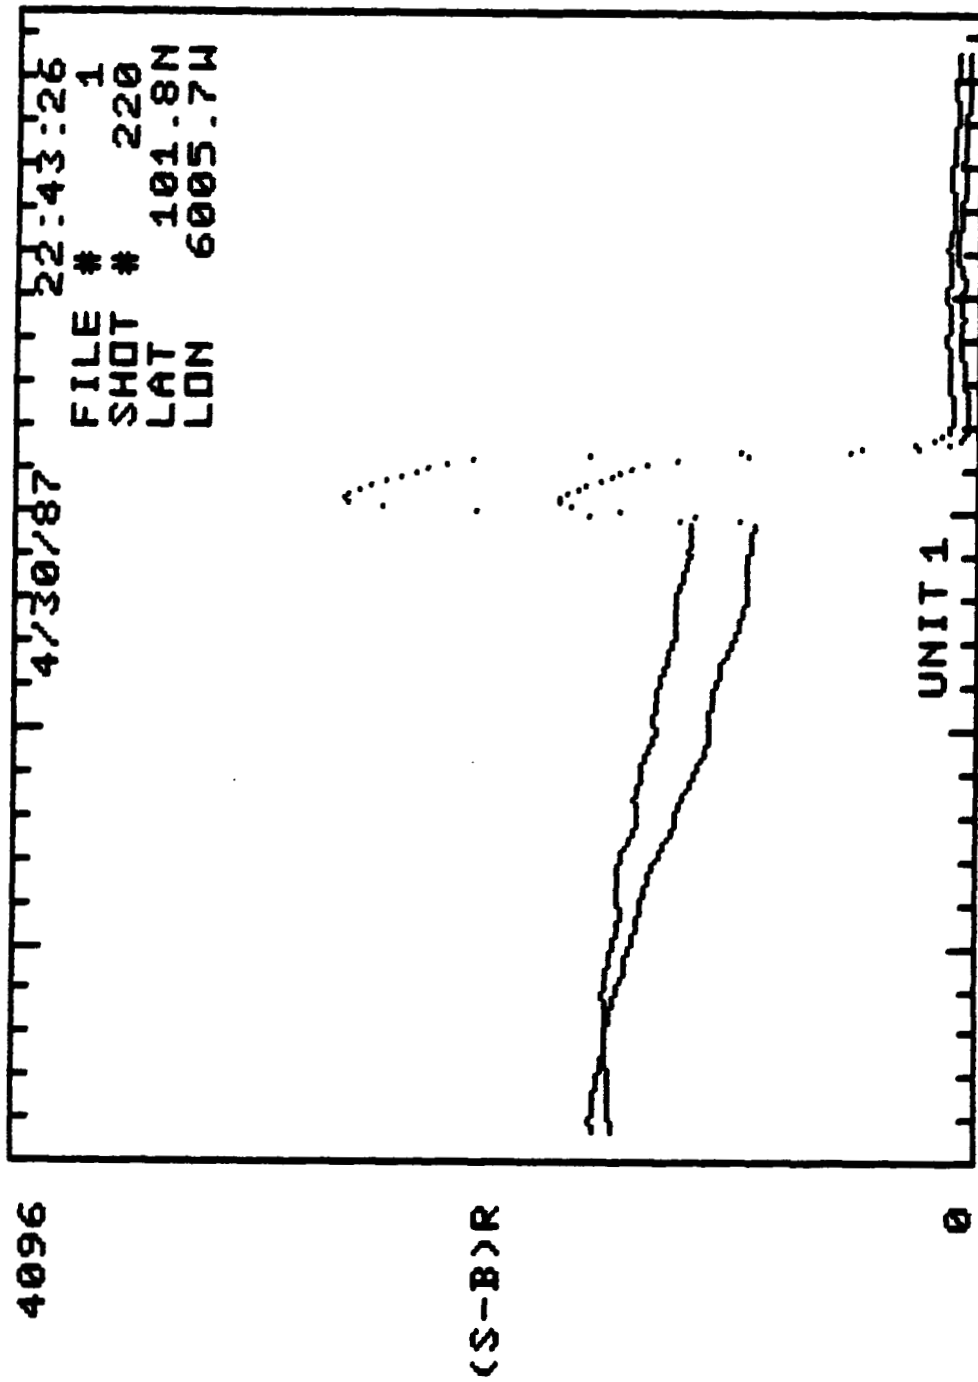


Figure 8. MODE 2 display with background subtraction and range-squared options in effect on DIAL pair of UNIT 1. Difference in slopes indicates absorption by ozone.

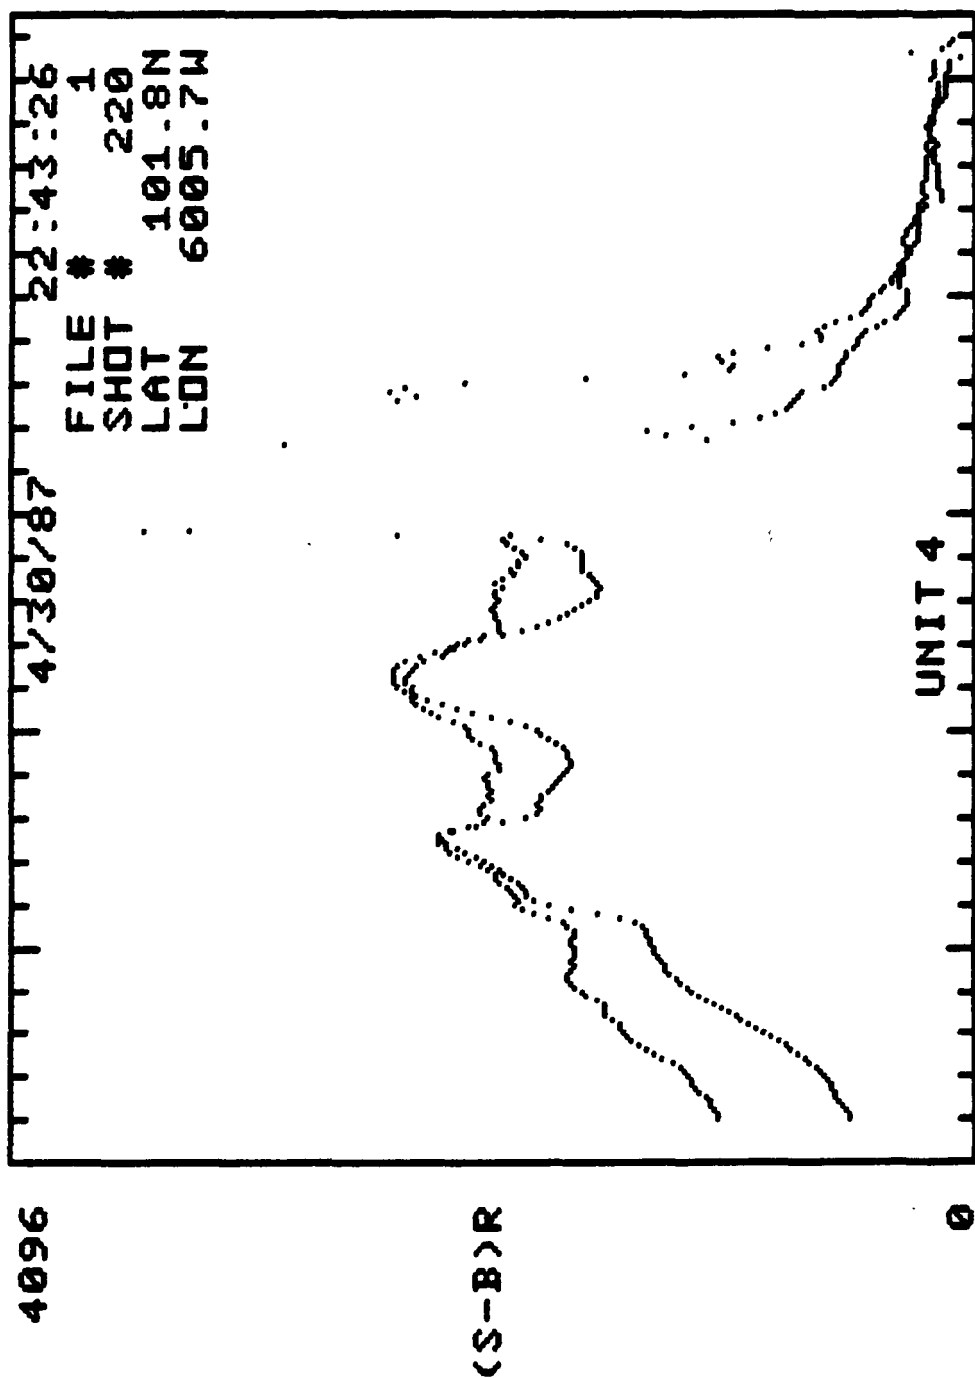


Figure 9. MODE 2 display of the online returns of units 3 and 4 with background subtraction, range-squared and overlay options in effect.

troposphere. Since the addition of the ACT II printers to the system, this operation is performed hardcopy and in color on one of the printers and rarely used as a CRT mode of display.

Concentration Profiles (OZONE)

This display mode presents the gas concentrations as a function of altitude or range calculated from the DIAL signal pair (figure 10). For each DIAL return, the background signal level is integrated over a specified interval. The starting point of this integration is selected by the command "BGWORD" and the number of words to average over is specified by "BGWIND". This average background is subtracted from the return signal, and the resulting data is then smoothed with a running mean over the specified range interval (see "SMOOTH"). This smoothing technique does not introduce errors only for those atmospheric conditions where the aerosol scattering is not changing rapidly along the DIAL measurement path. The DIAL equation (ref. 1) is evaluated using the smoothed lidar returns over a specified range cell size, usually 300 m. Ozone concentrations are determined for each range cell and finally, the Rayleigh extinction is corrected for altitude and subtracted. The Rayleigh term is to compensate for extinction differences between the on and off lines. Each DIAL signal pair produces a concentration profile. Ozone profiles are plotted as concentrations for stratospheric work and mixing ratios for tropospheric work. To obtain the mixing ratios, an approximation to the molecular number density is divided into the concentration at each range cell. Any number of DIAL measurements can be averaged together to improve the profile statistics at the expense of increased horizontal integration for the measurement. The standard deviation for the resulting averaged profile is computed at increments equivalent to the range cell size and displayed on the concentration profile.

The commands UNIT, BGWORD, BGWIND, RNGCEL, SMOOTH, PLTAVG, GASEXP can all be used to change the defaults to modify the display or to better improve the resulting calculations. These and others that can be used are listed in the section "Keyboard Commands". The command SHFTOA which applies only to ozone calculations is a diagnostic tool to shift one DIAL UV pair with respect to the other. This command will be further discussed in the section titled "DIAL Pair Alignment".

Hard Copy Aerosol Color-Scale Map (MAPAER)

This option represents the same type of display as described for "GRYSCL"; however, it is done in color on the ACT II printer. When this option is activated, the current banner record and MAPAER plotting parameters are printed followed by a 25 shade color scale display of relative aerosol concentrations. The color scale which follows the color spectrum is shown at the top of each plot. White is on the low end of the scale and black is on the high end. The user specifies a minimum value below which all data will appear as white ("WHITE") and a maximum value above

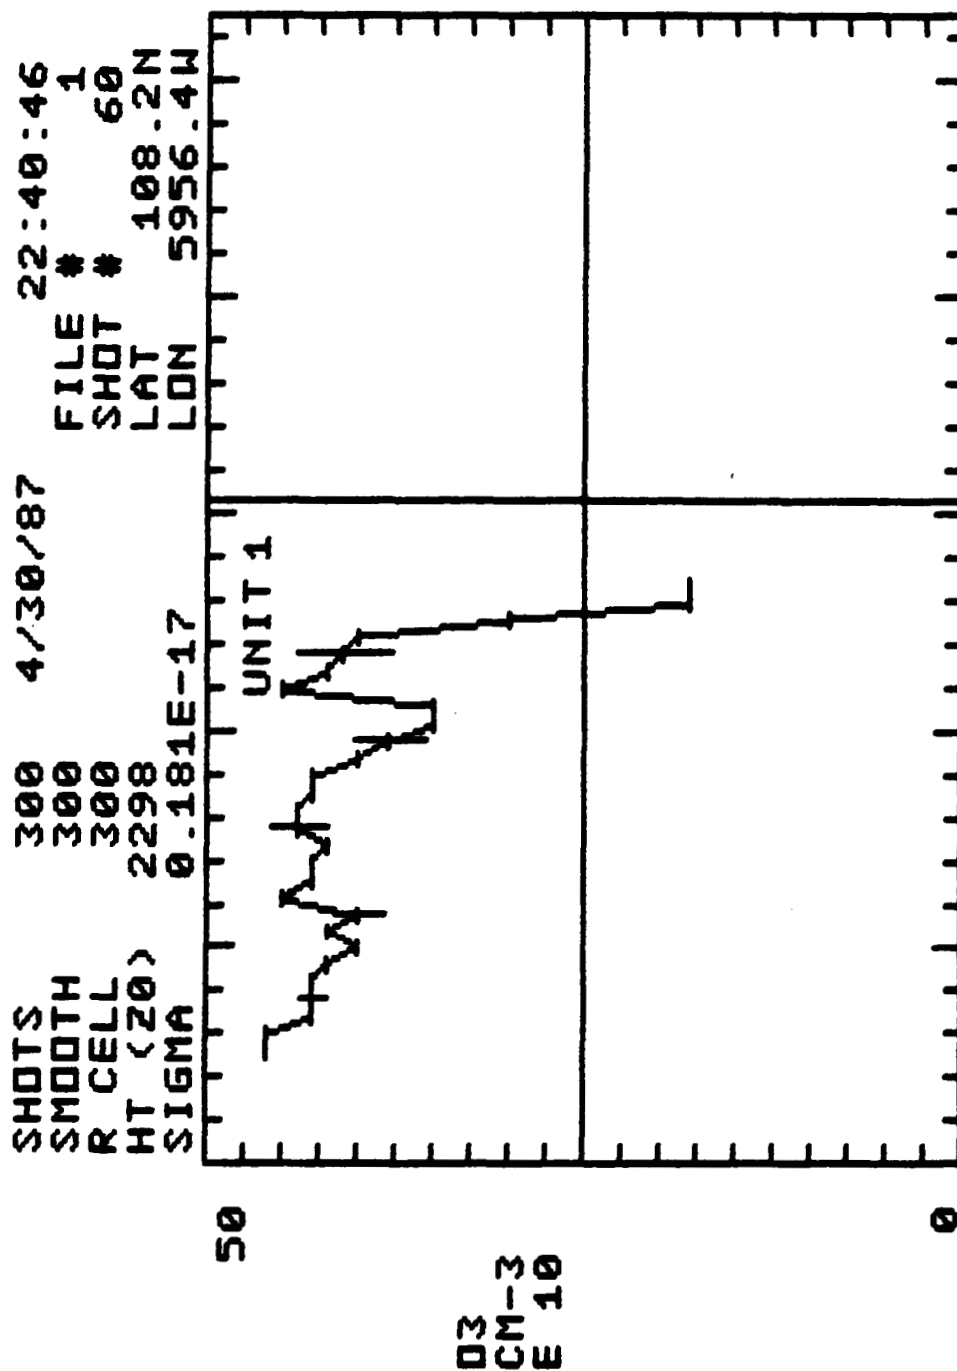


Figure 10. Example of OZONE display (300 shots averaged).

which all data will appear as black ("BLACK"). Data shots may be averaged (up to 15 shots) or plotted individually. Additionally, data may be vertically smoothed with a running average. The nadir data can be shifted for altitude variations using the information in the shot header if the ALTCOR option is used. During real-time operations the computer can plot about one profile a second (either averaged or individual). Time, latitude and longitude are printed at specified minute markers. The hard copy continues until turned off with the instruction "AEROFF" or whenever any of the MAPAER plotting parameters are changed. The user must re-start with "MAPAER" after changing plotting parameters. This allows the new plotting parameters to be printed so that an updated record is always available.

Hard-Copy Ozone Color Scale Map (MAPUV)

On and off-line pairs of data are sent to the JFEP-11 through the shared memory on LSI #2 and ozone concentrations similar to those discussed above (CRT display mode) are calculated. Each concentration profile up to some specified average is stored in the JFEP memory. When a total number of profiles for the average has been stored, a new profile will be added on to the end for one that is subtracted off the beginning to form a running average. All options discussed in the section concerning the CRT ozone display also apply to the hard-copy displays but must be preceded by the symbol *. Each single ozone profile can be shifted in the array to compensate for variations in aircraft altitude using the information in the shot header (nadir mode only). Additionally, cloud returns can be detected and computations will be performed as far as the cloud using the CLOUD I parameter. A value of CLOUD 2 will pick up weak clouds and a value of CLOUD 4096 will ignore clouds altogether.

Figure 11 shows sample aerosol and ozone color maps using the MAPAER and MAPUV commands.

Magnetic Tape Storage and Format

The DIAL data is stored in real-time using one of two Cipher tape drives. This allows for constant recording of data while one unit is rewinding. The data is recorded at 100 ips in "streamer" mode. Streamer mode is the only method we found to record the 8K blocks of DIAL data at 10 Hz operation. The disadvantage of streamer mode is that if the tape unit does not get a new instruction within a small period of time it requires a long repositioning time. The DIAL DAS software was written so that each data transfer from the digitizers is stored in a consecutive block of extended memory -- up to 11 blocks are available (for non-stack operation). Once transfer to the top block (@ 740000) is done data transfer continues to the bottom block (@ 200000). When a request is made to commence recording data, the first available block is transferred to tape as soon as the tape has repositioned. During repositioning time other data blocks will be stored in memory and these are queued as they come along. As soon as the tape is again ready it is given the next queued block to record. This procedure produces a streaming

AIRBORNE DIAL O₃ HOLE DATA
SEPTEMBER 5, 1987

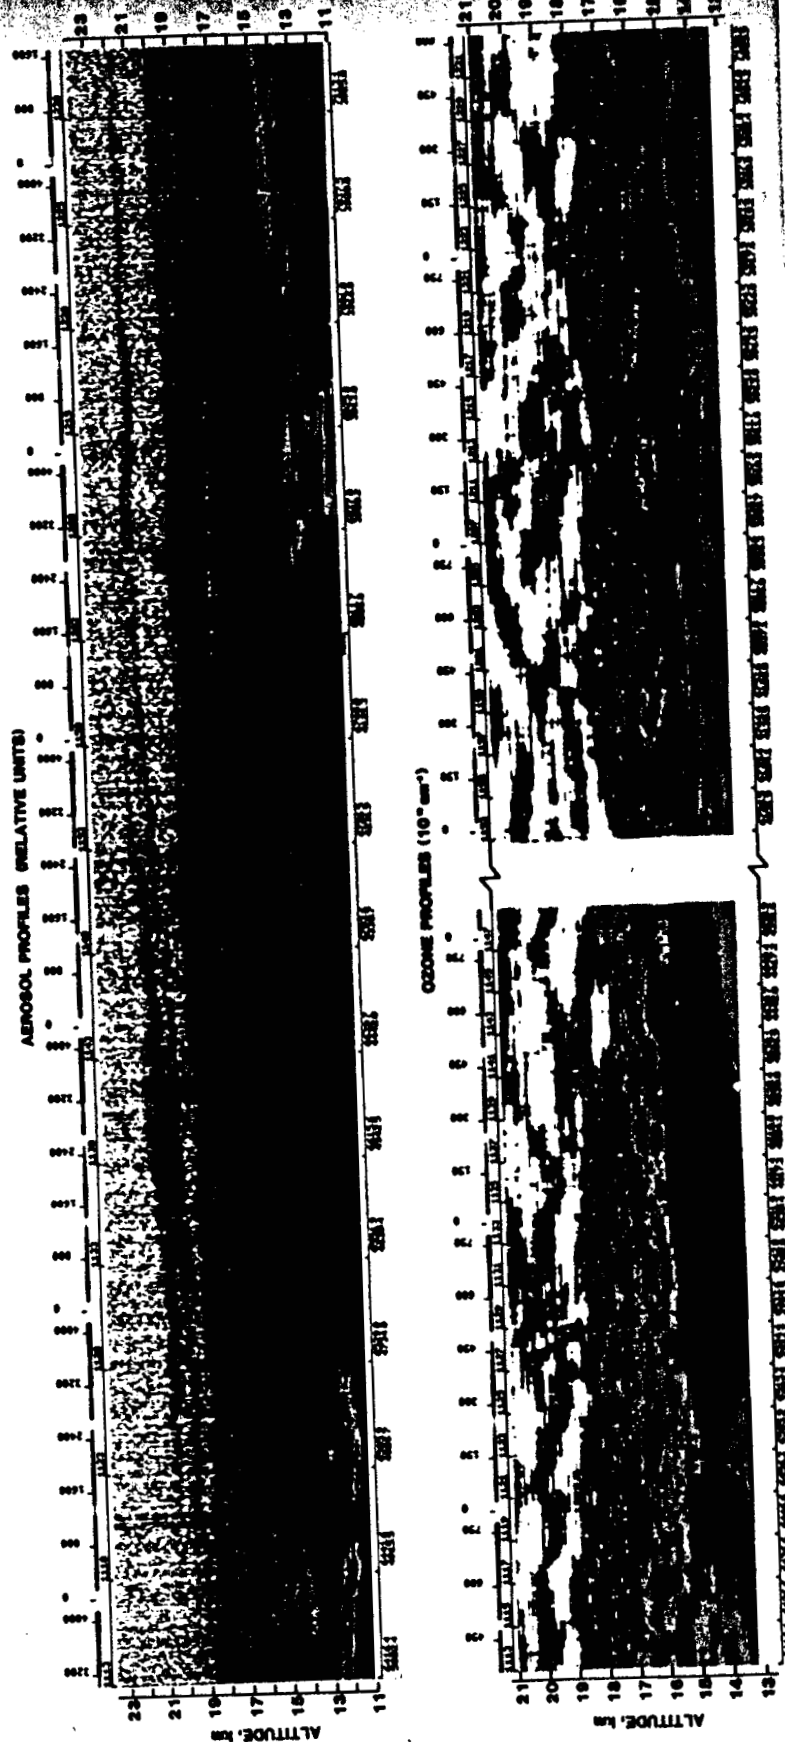


Figure 11. Photograph made of real-time aerosol (MAPAER) and ozone (MAPUV) color maps. Prints are 15% of original size.

operation with minimal need to reposition. Tests show that 4k blocks are written to tape at 10 Hz with upto 10 blocks getting queued, at 5 Hz 5 blocks get queued and at 1 Hz no blocks get queued.

Data is written using 1600 bpi PE magnetic tape format on 2400-ft reels of .5 in wide magnetic tape. Each data storage file begins with a 256 word banner record (16 bits per word) with DIAL DAS information as shown on table 6. The data from each laser shot is packed into one large record on magnetic tape (data from all digitizer units are packed into one single buffer). Each data record begins with a shot header of information required on a shot-by-shot basis. This includes time, shot number, latitude, longitude, altitude, temperature data, and laser energies. The number of words in the header is currently 30 but this number can be changed with the instruction "HDRPTS". Table 7 shows the structure of a typical data record. At the end of the tape or at the end of the information stored on that tape there are 2 file marks (EOF) to denote end of information.

While recording data, if one tape drive reaches an end of tape marker then it will automatically back up two records, write two EOF's, start rewinding the tape, and start recording a new file on the alternate tape drive.

Table 6. Banner record word assignments (dimensioned 256).

| <u>Word</u> | <u>Description</u> |
|-------------|--|
| 1 | banner record format |
| 2 | tape # |
| 3 | file # |
| 4 | # words in shot header |
| 5 | date |
| 6 | plane altitude (feet) (x10 when value is negative) |
| 7 | up/down mode (0=down; 1=up) |
| 8 | sampling frequency (MHz) |
| 9 | laser fire word # |
| 10 | laser rep rate (Hz) |
| 11 | absorption coefficient (mantissa) |
| 12 | absorption coefficient (exponent) |
| 13 | wakeup value |
| 14-16 | spares |
| 17 | words/return #1 unit 1 |
| 18 | words/return #1 unit 2 |
| 19 | words/return #1 unit 3 |
| 20 | words/return #1 unit 4 |
| 21 | words/return #2 unit 1 |
| 22 | words/return #2 unit 2 |
| 23 | words/return #2 unit 3 |
| 24 | words/return #2 unit 4 |
| 25 | starting storage word unit 1 |
| 26 | starting storage word unit 2 |
| 27 | starting storage word unit 3 |
| 28 | starting storage word unit 4 |
| 29 | baseline unit 1 |
| 30 | baseline unit 2 |
| 31 | baseline unit 3 |
| 32 | baseline unit 4 |
| 33 | direction and magnitude of trigger marker unit 1 |
| 34 | direction and magnitude of trigger marker unit 2 |
| 35 | direction and magnitude of trigger marker unit 3 |
| 36 | direction and magnitude of trigger marker unit 4 |
| 37 | shots to accumulate unit 1 |
| 38 | shots to accumulate unit 2 |
| 39 | shots to accumulate unit 3 |
| 40 | shots to accumulate unit 4 |
| 41 | post-trigger delay (usecs) unit 1 |
| 42 | post-trigger delay (usecs) unit 2 |
| 43 | post-trigger delay (usecs) unit 3 |
| 44 | post-trigger delay (usecs) unit 4 |
| 45 | species identifier (RAD50) unit 1 |
| 46 | species identifier (RAD50) unit 2 |
| 47 | species identifier (RAD50) unit 3 |
| 48 | species identifier (RAD50) unit 4 |
| 49 | trigger marker delay (words) unit 1 |
| 50 | trigger marker delay (words) unit 2 |
| 51 | trigger marker delay (words) unit 3 |
| 52 | trigger marker delay (words) unit 4 |
| 53-64 | spares |

| | |
|---------|---|
| 65-104 | ALT and TEMP calibration constants for channels 1-10 4 words per channel (slope mantissa, slope exponent, intercept mantissa, intercept exponent) |
| 105-144 | Energy monitor calibration constants for channels 1-6 4 words per channel (same as ADV11-C constants above) |

Table 7. Data record structure for shot buffers.

| Word # | Description |
|--------|--|
| 1 | shot number |
| 2 | stack/nostack indicator (1=stacked) |
| 3-4 | time of day |
| 5-6 | unused |
| 7 | latitude (low order) |
| 8 | latitude (high order) |
| 9 | longitude (low order) |
| 10 | longitude (high order) |
| 11 | pressure altitude |
| 12 | radar altitude |
| 13 | dew point temperature |
| 14 | surface temperature |
| 15 | total temperature |
| 16 | Gregory Ozone |
| 17-20 | spare DRV11-C channels |
| 21 | online UV energy |
| 22 | offline UV energy |
| 23 | online IR energy |
| 24 | offline IR energy |
| 25 | online visible energy |
| 26 | offline visible energy |
| 27-30 | spare energy monitor channels |
| 31 | # shots averaged unit 1 (same as IBAN(37)) |
| 32 | # shots averaged unit 2 (same as IBAN(38)) |
| 33 | # shots averaged unit 3 (same as IBAN(39)) |
| 34 | # shots averaged unit 4 (same as IBAN(40)) |
| 35 | # interrupts received from unit 1 |
| 36 | # interrupts received from unit 2 |
| 37 | # interrupts received from unit 3 |
| 38 | # interrupts received from unit 4 |
| 39-40 | spares |

The above constitutes the existing shot header. After this data the record buffer will contain the data stored from the various digitizers. The banner record whose values were defined in table 6 (IBAN) determines the storage of data:

```

if    L=IBAN(4),M1=IBAN(17),M2=IBAN(18),M3=IBAN(19),M4=IBAN(20)
      N1=IBAN(21),N2=IBAN(22),N3=IBAN(23),N4=IBAN(24)
then the data is located in the buffer as follows

```

| start word # | end word # | contents |
|--------------|---------------|-----------------------|
| 1 | L | shot header |
| L+1 | L+M1 | Unit 1 data (online) |
| L+M1+1 | L+M1+N1 = K1 | Unit 1 data (offline) |
| K1+1 | K1+M2 | Unit 2 data (online) |
| K1+M2+1 | K1+M2+N2 = K2 | Unit 2 data (offline) |
| K2+1 | K2+M3 | Unit 3 data (online) |
| K2+M3+1 | K2+M3+N3 = K3 | Unit 3 data (offline) |
| K3+1 | K3+M4 | Unit 4 data (online) |
| K3+M4+1 | K3+M4+N4 | Unit 4 data (offline) |

if data is stacked, there will follow another $4*(M4+N4)$ words of unit 4 data (see figure 5).

Decoding Information

This section provides information necessary to decode and convert various information in the banner (IBAN) and shot header (IBUF).

DATE IBAN(5)

| | | | | | |
|------|----|-------|-----|------|----------|
| bit: | 14 | 10 9 | 5 4 | 0 | |
| | | month | day | year | (binary) |

To get the actual year, add 1972 to the value in bits 4-0.

TRIGGER MARKERS IBAN(33)-IBAN(40)

The two high order bits indicate the logical operator: less than; is signified by a value of 1; equal to by a value of 2, and; greater than by a value of 3. The lower 14 bits indicate the magnitude of the comparison to be made.

GAS SPECIES IBAN(45)-IBAN(48)

Radix-50 values are stored, up to three characters per word, by packing them into single numeric values according to the formula:

$$((i * 50 + j) * 50 + k)$$

where "i", "j", and "k" represent the octal code values:

| | |
|-------|-------|
| Space | 0 |
| A - Z | 1-32 |
| 0 - 9 | 36-47 |

TEMP and ALT IBAN(65)-IBAN(104)
IBUF(11)-IBUF(20)

The banner record contains the conversion constants for the DRV11-C channels which are read in on a shot by shot basis and stored in the shot header.

counts = IBUF(10+ICH), where ICH = channel #
 volts = counts * (10v/4095 counts)
 and conversion to desired units is accomplished by:

volts*IBAN(65+I4)*10**IBAN(66+I4)+IBAN(67+I4)*10**IBAN(68+I4)
 where I4 is 4 * (channel # -1).

ENERGY MONITOR DATA

IBAN(105)-IBAN(144)
 IBUF(21)-IBUF(30)

As in the preceding data, the conversion constants are stored in the banner record and the laser energies are stored on a shot by shot basis in the shot header. The values in the header are 2's complement binary counts which have been calibrated to read in millivolts. To convert to millijoules:

IBUF(20+ICH)*(IBAN(105+I4)*10**IBAN(106+I4))
 +IBAN(107+I4)*10**IBAN(108+I4)

where ICH is the channel and I4 = 4 * (channel # -1).

NAVIGATION DATA

IBUF(7)-IBUF(10)

Latitude and longitude are each 2 16-bit word integers coded in BCD. Bits 7-0 of the low order word are labels (latitude label in hex is 10 and longitude is 90). The information is then stored in bits 15-8 of the low order word and bits 13-0 of the high order word with .1 min resolution. Bits 14 and 15 of the high order word designate east, west, north or south. Some examples:

| | | |
|----------|--------------------------|----------------|
| | IBUF(8) | IBUF(7) |
| NB125.8 | 0000 1000 0001 0010 0101 | 1000 0001 0000 |
| | IBUF(10) | IBUF(9) |
| W16637.8 | 1101 0110 0110 0011 0111 | 1000 1001 0000 |
| E07654.1 | 0000 0111 0110 0101 0100 | 0001 1001 000 |

DIAL Pair Alignment

It has been found that it is extremely important to precisely line up the on and off line returns. Even a one word offset can cause oscillations in the concentration profiles. Therefore, a discussion of data alignment follows. The trigger markers provided by the laser-coherent time base are electronically delayed from the actual laser firing so that any noise due to flash lamp firing will not mask the markers. These markers are the most accurate so they are used for the DIAL type returns. There are no trigger markers available for the one-wavelength returns so either flash lamp noise, or a breakthrough spike as the signal hits the aircraft window, or in the case of the 1.06 return where the diode detector is always on the return itself can be used to line up these returns with the DIAL returns. These types of markers occur at the time of laser firing. The first step should be to attempt to line up the on and off-line pair as it is read in from the digitizers. Plug the trigger markers into the first unit and note the word at which these occur in both the

on and off line returns. This is done by listing out the first 50 words of each return (e.g. LIST -1,50 and LIST -601,650). If there is any offset of the trigger markers, stop data transfer and adjust the WAKEUP value to line up the offline return with the online. For example, if the current WAKEUP value is 1363 and the offline trigger marker occurs one word earlier than the online trigger marker, a new WAKEUP of 1362 will properly align the returns. If there were no "jitter" in the timing of the two returns this would be all that would be necessary. The ABLE2B data was found to be very stable, in fact, no change was detected throughout the 6 weeks of the experiment. On the other hand, the Ozone Hole data showed three changes in the separation during the various flights. In order to eliminate any doubt, trigger search routines can be used to line up the returns on a shot by shot basis. To line up the UV DIAL pair, the software requires several inputs:

1. Determine and input the word number of the laser fire. This can most easily be done by transmitting the IR return and noting the word number of saturation (using the LIST -I,J command). Input the word number with the LASFIR I command.
2. Check the offset between the actual laser fire and the delayed trigger markers. This offset is currently 13 words or 1.3 usecs. Enter the number of words with the TODLY command.
3. With both the PMT returns and the trigger markers going into the digitizer make sure the trigger markers can still be discerned. If not, an adjustment of the light pipe may be necessary. The trigger levels must be specified for single shots so if data is being averaged in the digitizer you must either divide the level by the number of shots averaged or do a TWEAK operation on the digitizer unit. The trigger level is entered as less than (<), greater than (>), or equal to (=) some value (eg. TRGLEV < 0, > 900, = -2048). Do not forget to return to normal data averaging when done using TWEAK 0.

The above three steps should be repeated for each digitizer unit with DIAL pairs. Data alignment of the single return aerosol data is not as critical but still important for comparisons with the DIAL data and accurate determination of aerosol layers. Actually, all data pairs (either DIAL or single aerosol returns) can be aligned using only one set of trigger markers since if there is any jitter between the on and offline laser timing it will be the same in each unit. Future plans are to include a trigger search during data transmission and to include these findings in the shot header.

The trigger search routine looks for the trigger marker in the 11 words centered around where it expects to find one as specified by the inputs LASFIR and TODLY. For example, LASFIR is set for 7, TODLY is 13, and TRGLEV is =2048 then the trigger search routine expects to find a value of 2048 between word 15 and word 25 of the online return and between WORDS1 + 15 and WORDS1 + 25 for the offline. If a value is found before that window or no value is found at all within the 11 words searched then the data shot is not included in the concentration calculation. MODE 2 display does a trigger search on each return so inputs can be checked by displaying MODE 2. The valid trigger words are displayed in the lower righthand side of the screen as

they are found. Invalid markers are denoted by an asterisk.

One more word of caution. The occurrence of the trigger marker in the data stream can be altered by switch settings on the digitizers as well as by the command STORE. The Transiacs have a pre-trigger dial which increments by 512 words (for 4096 word record length). To allow for an ample window for the trigger marker the Transiac should be set at 1/8 (3584 words stored after the trigger and 512 words before). When the data from the digitizers is transferred into computer memory for storage to magnetic tape, the operator has the option of selecting where to begin storage with the instruction STORE. This command is especially useful with the Transiacs since so many pre-trigger words need be digitized. It also helps to conserve on storage when the first return in the digitizer is of no interest and only the second return need be saved (such as the zenith operation measurements). It has also been found that sometimes one of the amplifiers will cause a one word offset of the entire data set. When this happens, a STORE value should be input to the program to bring that data set in line with the other units.

Figure 12 shows digitizer memory as compared to computer memory for the keyboard commands as follows:

```
STORE 490,490,490,490
WORDS1 650,1350,600,600
WORDS2 650,1350,1400,1400
```

The events shown at the top of the figure are defined in the following table:

| Event | | Time (usec) | Word # |
|-------|---------------------------------------|-------------|--------|
| A | On-line laser fires | 0 | 499 |
| B | TOA light pipe marker | 1.3 | 512 |
| C | FMT A-gate turns on | 5 | 549 |
| D | Ground return (4500 M) | 30 | 799 |
| E | Time base "sleeps" for 163.7 usecs | 136.2 | 1861 |
| F | Off-line laser fires | 300 | 1862 |
| G | TOB light pipe marker | 301.3 | 1875 |
| H | FMT B-gate turns on | 305 | 1912 |
| I | Ground return (4500 M) | 330 | 2162 |

The sample dialogue on the following page shows how to start the computer and run the DIAL DAS OS. This dialogue follows the typical sequence performed during actual flight experiments. Lines followed by comments preceded by two hyphens (--) are user inputs. Lines followed by comments in parentheses are computer responses. The use of some of the DIAL DAS OS commands are shown.

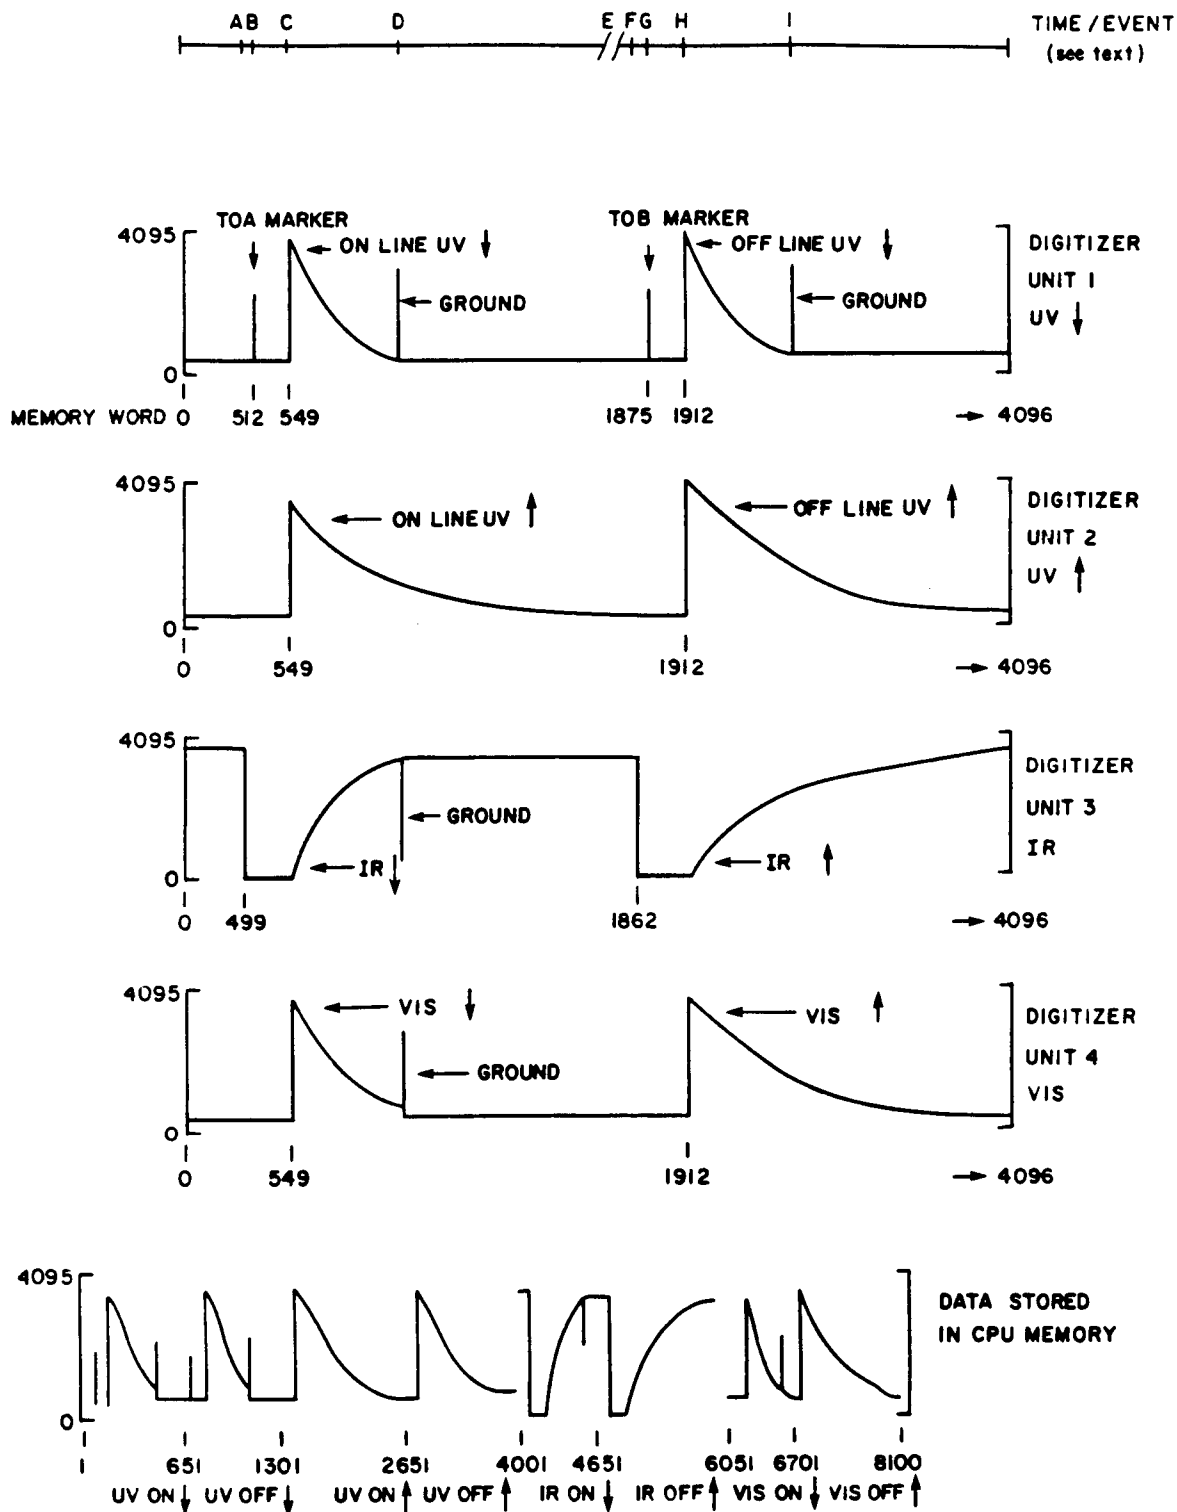


Figure 12. Example of digitizer memory as compared to saved buffer memory.

ORIGINAL PAGE IS
OF POOR QUALITY

Sample DIAL DAS dialogue. The dialogue sequence on the following pages is typical of an actual flight experiment. The first two pages show the procedure to align the different returns with each other, which is not necessary to perform on each flight provided the returns are stable. The third page shows the commands necessary to display the returns for optimization, record to tape and perform color maps of aerosol and ozone.

```

.R TIME                               -- RUN PROGRAM TO SET CRYSTAL CLOCK
MARK TIME BY TYPING LETTER "P"
ENTER TIME HRS.MINS:SECS: 13.25.30 -- TYPE TIME IN HERE
022204                               (TIME PROGRAM HALTS AND WAITS FOR MARK)
8P                                   -- TYPE "P" TO MARK THE TIME
STOP --                             (TIME IS LATCHED, TIME PROGRAM STOPS)
.RUN MASTER                          -- RUN PROGRAM "MASTER"
.RUN J11                             (LSI 01 TELLS LSI 02 TO RUN PROGRAM "J11")
8P/0010000 1000                     (LSI 01 OPENS STACK POINTER REG ON JFEP AND LOADS IT WITH ADDRESS 1000)
8P                                   (LSI 01 TELLS JFEP OUT TO RUN J11 WHICH HAS BEEN LOADED STARTING AT 1000)
.RUN SLAVE                           (LSI 01 TELLS LSI 02 TO RUN PROGRAM "SLAVE")
                                     (LSI 01 PRINTS OUT RESIDENT BANNER RECORD)

... BANNER RECORD ...
TAPE = 1 FILE= 0 HEADER WORDS= 40 DATE= 6/5/87
ALT= 0 UP/DOWN= 0 SAMP FRE= 10 LASER FINE= 9
REP RATE= 5 ABS COEF= 181E-20 WAKEUP=1362
UNIT WORDS1 WORDS2 START BASE TRIG DELAY SPECIES DATAPG
1 600 600 490 0 > 200 5 03 5
2 1350 1350 490 4095 > 300 5 03 5
3 600 1400 490 4095 = 0 5 1R 5
4 600 1400 490 0 > 150 5 VIS 5
A/D CONVERSION CONSTANTS          ENERGY COMPARISONS
CHAN SLOPE OFFSET                CHAN SLOPE OFFSET
1 4000. -1000.                   1 0.73E-02 -3.23
2 15.0 -75.                      2 0.42E-02 -1.12
3 10.0 -10.                      3 0.125 -47.2
4 20. -50.                       4 0.1326 -7.44
5 0.0 0.0                       5 0.55E-02 -1.68

?START                             -- START DATA TRANSFER FROM DIGITIZERS (SEE FIGURE 12 FOR DATA STORAGE)
?TUEEK 1                           -- TRANSFER UNIT 1 AT PULSE FREQUENCY
?LIST -1.30                         -- LIST LAST BUFFER FROM WORDS 1 TO 30
SHOT = 151 AVG = 1
0 1 2 3 4 5 6 7 8 9
1 300 302 299 305 301 303 299 300 500 301
11 300 303 305 302 300 301 299 301 300 300
21 1631 1604 1691 1723 300 300 304 300 302 303
?LIST -601.630                     -- LIST OUT FIRST 30 WORDS OF OFFLINE RETURN
SHOT = 186 AVG = 1
0 1 2 3 4 5 6 7 8 9
601 310 304 301 300 307 299 304 300 302 473
611 300 301 301 307 290 301 306 302 303 309
621 303 1530 1555 1493 1256 376 302 303 305 301
?LASER 9                           -- LASER FINE IS AT WORD 9 OF ONLINE DATA
?TRIGGER 14                        -- TRIGGER MARKER FOR UNIT 1 IS DELAYED 14 WORDS
?TRIGLEV >400                     -- CHANGE TRIGGER LEVEL OF UNIT1 TO >400
?TUEEK 0                           -- RETURN UNIT 1 TO 5 SHOT ACCUMULATIONS
?STOP                              -- STOP DATA TRANSFER
?WAKEUP 1363                       -- ALIGN OFFLINE TO ONLINE DATA
?START                             -- START DATA TRANSFER
?TUEEK 1                           -- SINGLE SHOTS ON UNIT 1
?LIST -601.630                     -- LIST OUT FIRST 30 WORDS OF OFFLINE RETURN
SHOT = 229 AVG = 1
0 1 2 3 4 5 6 7 8 9
601 304 301 300 307 299 304 300 302 473 310
611 300 301 301 307 290 301 306 302 303 309
621 1563 1530 1555 1493 362 306 302 303 305 301
?TUEEK 2                           -- RETURN UNIT 1 TO 5 SHOTS, TAKE SINGLE SHOTS ON UNIT 2
?LIST -1201.1230                  -- LIST UNIT 2/OFFLINE FIRST 30 WORDS
SHOT = 251 AVG = 1
0 1 2 3 4 5 6 7 8 9
1201 3900 3902 3909 3905 3901 3903 3909 3900 500 3901
1211 3900 3903 3905 3902 3900 3901 3909 3901 3900 3900
1221 1631 1604 1691 1723 3900 3900 3904 3900 3902 3903
?LIST -1551.1500                  -- LIST UNIT 2/OFFLINE FIRST 30 WORDS

```


ORIGINAL PAGE IS
OF POOR QUALITY

```

SHOT = 372 AVG = 1
      0 1 2 3 4 5 6 7 8 9

1551 3904 3901 3900 3907 3909 3904 3900 3902 1296 3909
1561 3900 3901 3901 3907 3900 3901 3906 3902 3903 3909
1571 1530 1555 1493 1256 3976 3902 3903 3905 3901 3900
?TODLY ,14 -- TRIGGER MARKERS ON UNIT 2 ARE DELAYED 14 WORDS
?TRGLEV ,3800 -- LOOK FOR LEVEL LESS THAN 3800
?TWEK 3 -- RETURN UNIT 2 TO 5 SHOTS, TAKE SINGLE SHOTS UNIT 3
?LIST -3901,3930 -- LIST UNIT 3/ONLINE FIRST 30 WORDS
SHOT = 462 AVG = 1
      0 1 2 3 4 5 6 7 8 9

3901 3900 3902 3909 3905 3901 3903 3909 3900 0 0
3911 0 0 0 0 0 0 0 0 0 0
3921 0 0 0 0 0 0 0 0 0 0
?LIST -4501,4530 -- LIST UNIT 3/OFFLINE FIRST 30 WORDS
SHOT = 572 AVG = 1
      0 1 2 3 4 5 6 7 8 9

4501 3904 3901 3900 3907 3909 3904 3900 3902 0 0
4511 0 0 0 0 0 0 0 0 0 0
4521 0 0 0 0 0 0 0 0 0 0
?TODLY ,0 -- WILL USE ACTUAL LASER FIRING AS MARKER (NO DELAY)
?TRGLEV ,0 -- WILL LOOK FOR SATURATION ON UNIT 3
(AT THIS POINT THE TRIGGERS ON UNIT 4 SHOULD BE CHECKED. SINCE WE HAVE ONLY 2 LIGHT PIPE OUTPUTS WHICH HAVE
ALREADY BEEN USED ON UNITS 1 AND 2, AND NOT SUFFICIENT POCCEL CELL NOISE ON THE VISIBLE TUBE TO USE AS A MARKER,
WE MIGHT TEMPORARILY USE THE MARKERS OF UNIT 1 TO CHECK THE DATA)
?TWEK 4 -- RETURN UNIT 3 TO 5 SHOTS, TAKE SINGLE SHOTS ON UNIT 4
?LIST -5901,5930 -- LIST UNIT 4/ONLINE FIRST 30 WORDS
SHOT = 505 AVG = 1
      0 1 2 3 4 5 6 7 8 9

5901 500 502 509 505 501 503 509 500 500 501
5911 500 503 505 502 500 501 509 501 502 1622
5921 1601 1600 1591 523 500 500 504 500 502 503
?LIST -6501,6530 -- LIST UNIT 4/OFFLINE FIRST 30 WORDS
SHOT = 525 AVG = 1
      0 1 2 3 4 5 6 7 8 9

6501 504 501 500 507 509 504 500 502 500 509
6511 500 501 501 507 500 501 506 502 503 1609
6521 1530 1555 1493 526 506 502 503 505 501 500
?TWEK 0 -- RETURN UNIT 4 TO 5 SHOTS
?TODLY ,14 -- MARKER IS DELAYED 14 WORDS
?TRGLEV ,600 -- MARKER MUST BE GREATER THAN 600
?STOP -- STOP DATA TRANSFER
?STORE ,409 -- UNIT 4 IS TRIGGERING 1 WORD EARLY SO BY STORING 1 WORD SOONER WE CAN LINE IT UP WITH OTHER UNITS
?START -- RESTART DATA TRANSFER
?HEIGHT 15000 -- PLACE AIRCRAFT ALT IN BANNER
?LISTBNN -- LIST OUT NEW BANNER RECORD
... BANNER RECORD ...
TAPE = 1 FILE= 0 HEADER WORDS= 40 DATE= 6/5/07
ALT= 15000 UP/DOWN= 0 SAMP FRE= 10 LASER FIRE= 9
REP RATE= 5 ADS COEF= 101E-20 WAKEUP=1363
UNIT WORDS1 WORDS2 START BASE TRIG DELAY SPECIES DATNG
1 600 600 490 0 > 400 5 03 5
2 1350 1350 490 4095 < 3000 5 03 5
3 600 1400 490 4095 = 0 5 1A 5
4 600 1400 409 0 > 600 5 VIS 5
A/D CONVERSION CONSTANTS ENERGY CONVERSIONS
CHAN SLOPE OFFSET CHAN SLOPE OFFSET
1 4000. -1000. 1 0.73E-02 -3.23
2 15.0 -75. 2 0.42E-02 -1.12
3 10.0 -10. 3 0.125 -47.2
4 20. -50. 4 0.1326 -7.44
5 0.0 0.0 5 0.55E-02 -1.60
?UNIT 1 -- DISPLAY MAGIR UV BY ITSELF

```

ORIGINAL PAGE IS
OF POOR QUALITY

```

?ONLINE      -- DISPLAY ONLINE UV FOR OPTINIZATION
?OFFLINE     -- DISPLAY OFFLINE UV FOR OPTINIZATION
?BOTH        -- DISPLAY BOTH UV'S FOR PRT OPTINIZATION
?UNIT 2      -- DISPLAY ZENITH UV
?ONLINE      -- DISPLAY ZENITH UV ONLINE FOR OPTINIZATION
?OFFLINE     -- DISPLAY ZENITH UV OFFLINE FOR OPTINIZATION
?BOTH        -- SET PRT TO BRING BOTH ON SCALE
?UNIT 3      -- DISPLAY IR
?ONLINE      -- DISPLAY MADIR I FOR OPTINIZATION
?OFFLINE     -- DISPLAY ZENITH IR FOR OPTINIZATION
?BOTH        -- SET AMPLIFIER GAINS FOR BOTH
?UNIT 4      -- DISPLAY VISIBLE
?ONLINE      -- DISPLAY MADIR VIS FOR OPTINIZATION
?OFFLINE     -- DISPLAY ZENITH VIS FOR OPTINIZATION
?BOTH        -- SET PRT GAINS FOR BOTH
?STACK       -- WILL GATHER VIS AT 5 HZ
?RECORD      -- EVERYTHING IS READY, SO RECORD
?UNIT 3      -- DISPLAY IR
?ONLINE      -- MADIR IR ONLY
?RNGCOR 1    -- RANGE SQUARE DATA
?BLACK 1500  -- DETERMINE SCALING FOR AEROSOL COLOR MAP
?MAPAER      -- START AEROSOL COLOR MAP
?OZONE       -- DO OZONE CALCULATION
?BLACK 750   -- DETERMINE SCALING FOR OZONE COLOR MAP
?MAPUV      -- START OZONE COLOR MAP
?ENDFIL      -- DONE WITH LEG, END THE FILE
?AEROFF      -- END AEROSOL COLOR MAP
?UVOFF       -- END OZONE COLOR MAP
?STOP        -- STOP DATA TRANSFER
?LOLEG       -- CALL UP PARAMETERS FOR A LOW LEG
?START       -- START DATA TRANSFER
?HEIGHT 500  -- ENTER NEW PLANE ALTITUDE
?LSTBNA      -- LOOK AT LOW LEG BANNER DEFAULTS

... BANNER RECORD ...
TAPE = 1 FILE= 1 HEADER WORDS= 40 DATE= 6/5/87
ALT= 500 UP/DOWN= 1 SAMP FRE= 10 LASER FIRE= 9
REP RATE= 5 ABS COEF= 101E-20 WAKEUP=1363
UNIT WORDS1 WORDS2 START BASE TRIG DELAY SPECIES DATA#
  2 1350 1350 490 4095 < 3000 5 03 5
  3 0 1400 1053 4095 = 0 5 IR 5
  4 0 1400 1053 0 > 500 5 VIS 5

A/D CONVERSION CONSTANTS      ENERGY CONVERSIONS
CHAN SLOPE OFFSET             CHAN SLOPE OFFSET
  1 4000. -1000.              1 0.73E-02 -3.23
  2 15.0 -75.                 2 0.42E-02 -1.12
  3 10.0 -10.                 3 0.125 -47.2
  4 20. -50.                  4 0.1326 -7.44
  5 0.0 0.0                   5 0.55E-02 -1.60

?UNIT 2      -- SET AMPLIFIER AND PRT GAINS FOR UV
?UNIT 3      -- SET AMPLIFIER GAIN FOR IR
?UNIT 4      -- SET AMPLIFIER AND PRT GAINS FOR ZENITH VIS
?RECORD      -- RECORD DATA (NO STACKING OR LOW LEG)
?UNIT 3      -- DISPLAY ZENITH IR
?RNGCOR 1    -- RANGE CORRECT
?BLACK 2000  -- DETERMINE SCALING FOR AEROSOL COLOR MAP
?MAPAER      -- START AEROSOL COLOR MAP
?MAPUV      -- START OZONE COLOR MAP
?ENDFIL      -- END OF LEG, END THE FILE
?AEROFF      -- STOP AEROSOL COLOR MAP
?UVOFF       -- STOP OZONE COLOR MAP
?NILEG       -- SET UP FOR HIGH LEG
(CAND SO ON.....)

```

KEYBOARD COMMANDS

After the start-up procedure outlined above, all further keyboard input is interpreted by the program MASTER. A complete set of legal commands are listed on the following pages. A single character of operator input can be erased by means of the BACKSPACE (←) key. An entire line can be erased using the DEL key. The DIAL DAS OS is brought on-line with predefined option defaults. Data transfer from the digitizers can be initiated immediately if these defaults are suitable by means of the START command. Once START has been entered the program is interrupt-driven by the digitizers and certain parameters should not be changed. Commands that change these parameters are listed in the section "Stop Mode Commands" and can be used only after STOP has been entered. Also included in the "Stop Mode Commands" are those commands which deal with the interaction of the two LSI's. These commands can only be issued in stop mode to prevent the computers from getting out of sync. Error messages are detailed in Appendix III.

In the following list of commands, the variables U1, U2, U3, and U4 are used to refer to input parameters for digitizer units #1, #2, #3, and #4 respectively. The Transiacs can be used in any order which is determined by the command CAMACS whose input parameters list the station numbers of each unit in the sequence in which they are to be read. Once the order has been established by the CAMACS command all other commands that have unit numbers as variables will follow that order.

Commands which have been changed or added since last year's report are denoted by a plus symbol.

Stop Mode Commands

1. Digitizer Storage Commands:

| | | | |
|---|--------|-------------|--|
| + | WORDS1 | U1,U2,U3,U4 | # points/return #1 for each unit |
| + | WORDS2 | U1,U2,U3,U4 | # points/return #2 for each unit |
| | STORE | U1,U2,U3,U4 | store from this word for each unit |
| | CAMACS | I,J,K,L | station # for Transiacs to be used |
| + | DATAVG | U1,U2,U3,U4 | # shots to sum before storage |
| | LOLEG | | calls for a number of defaults used during low altitude passes |
| | HILEG | | calls up a number of defaults used during high altitude passes |
| + | WAKEUP | I | word separation in digitizer between first and second returns |

2. Play-Back Commands:

| | | |
|------|---|--|
| PLOT | I | plot I shots from tape if I=-1 plot from memory |
|------|---|--|

3. LSI #2 Program Control Commands:

| | |
|-------|------------------------------------|
| BOOT | boot LSI #2 then run program SLAVE |
| SLAVE | run program SLAVE on LSI #2 |

Start or Stop Mode Commands

1. Program Control Commands:

| | |
|----------|---|
| START | start data transfer from digitizers |
| STOP | stop data transfer |
| RESTR | clears interrupts and issues a macro RESET command which returns all units to their status at power-up time |
| SYNC | synchronize the two computers --used when monitor display fails to update |
| KILL | kill program MASTER and return to Monitor |
| + STACK | record in stacked format the last unit at 5 Hz rep rate |
| SHTSET | reset shot counter to zero |
| LSTBNR | print out current banner record |
| LSTPLT | print out current plotting options |
| COPY I | copy CRT to Trilog (sizes: I=1-4) |
| PRINT | plot buffer is printed out on Trilog |
| LIST I,J | print data buffer from word I to J if I<0 print buffer in memory if I>0 read buffer from tape |

2. Banner Record Input:

| | | |
|----------|-----------------|---|
| FORMAT | I | format # (=2 presently) |
| TAPE | I | tape # |
| FILE | I | file # |
| HDRPTS | I | reserve I words in shot header |
| UPDOWN | I | I=0 down-looking; I=1 up-looking |
| PULFRE | I | pulse repetition frequency (Hz) |
| SAMFRE | I | sampling rate (MHz) |
| + HEIGHT | I | plane altitude (ft)--for altitudes greater than 32000 use -I/10 |
| PRETRG | I | # words stored before trigger marker |
| ABSCOF | I,J | absorption coefficient I*10**J (atm-cm)-1 |
| TODLY | U1,U2,U3,U4 | # words offset between marker and actual laser firing |
| DELAY | U1,U2,U3,U4 | usecs after trigger to start of return |
| GASES | U1,U2,U3,U4 | 3-letter gas identifier (AER,O3,H2O) |
| BASLIN | U1,U2,U3,U4 | base line for returns |
| TRGLEV | aU1,bU2,cU3,dU4 | trigger marker level where a,b,c,d can be = or < or > |

3a. Calibration Constants For Met Data:

| | | |
|-------|---------|--|
| ADCH1 | I,J,K,L | altitude slope ($I \times 10^{**}J$) and intercept ($K \times 10^{**}L$) |
| ADCH2 | " | altitude-radar " |
| ADCH3 | " | dewpoint " |
| ADCH4 | " | FRT temp " |
| ADCH5 | " | total temp " |
| ADCH6 | " | Gregory ozone " |

3b. Conversion Constants For Laser Energy Data:

| | | |
|-------|---------|---|
| EMCH1 | I,J,K,L | channel 1 slope ($I \times 10^{**}J$) and intercept ($K \times 10^{**}L$) |
| EMCH2 | " | channel 2 " |
| EMCH3 | " | channel 3 " |
| EMCH4 | " | channel 4 " |
| EMCH5 | " | channel 5 " |
| EMCH6 | " | channel 6 " |

4. Magnetic Tape Commands:

| | | |
|--------|---|----------------------------------|
| CIPHER | I | cipher unit # (I=1 or 2) |
| RECORD | | write banner and start recording |
| BANNER | | write banner |
| ENDFIL | | write EOF and stop recording |
| REWIND | | rewind tape to BOT |
| SKPEOI | | skip to 2 consecutive EOF's |
| FNDFIL | I | search for file I (forward only) |
| SKPFIL | I | skip forward I files |
| BAKFIL | I | skip backward I files |
| SKPREC | I | skip forward I records |
| BAKREC | I | skip backward I records |

5. Plotting Options Commands:

| | | |
|---------|-------------|---|
| TWEEK | I | sample and display unit I at rep rate |
| PLTMOD | I | select plot mode I (I=0 for no display) |
| MODE 1 | | raw data display |
| MODE 2 | | on/off line overlay display |
| OZONE | | ozone concentration display mode |
| WATER | | water vapor concentration display mode |
| PLTGRY | I | plot gray scale if I=1 |
| GRYSCL | | CRT aerosol gray scale display |
| UNIT I | | display unit I data only |
| ONLINE | | show on-line return only |
| OFFLINE | | show off-line return only |
| BOTH | | show both on-line and off-line |
| RETURN | U1,U2,U3,U4 | plot return # for each unit (both=7) |
| SCALE | I | plot scale factor where scale= $2^{**}I$ |
| YMAX | I | display range interval (see note #2) |
| BLOWUP | | subtract background and blowup to scale=0 |
| OFFSET | I | offset x-axis by I |
| CLEAR | I | clear CRT (0=no clear;1=data only;15=all) |
| OVRLAY | I | overlay data from different units if I=1 |
| BGWORD | I | start word # for background average |

| | | |
|--------|---|--|
| BGWIND | I | # words to average for background (window) |
| SUBBAK | I | subtract background if I=1 |
| RNGCOR | I | range correct if I=1 |
| SMOOTH | I | smooth data over I meters (max 105m) |
| PLTAVG | I | average I shots in display |
| INDEX | I | index of I through data buffer (if I=0 program computes index necessary to fit data on screen) |
| FIXPNT | I | I pixels plotted per data point |
| UPDATE | I | I = 0 update plot and right screen I = 1 update plot only I = 2 update right screen only |
| RNGCEL | I | use range cell of I meters |
| GASEXP | I | concentrations in parts *10**I |
| SHFTOA | I | shift TOA marker by I words |
| ATMCOR | I | if I=1 correct concentrations for altitude change of standard atmosphere (this correction not necessary when the absorption cross-section is changing with altitude as well) |
| RAYCOR | I | Rayleigh correction in same units as GASEXP above |

6. Aerosol Color-Scale Commands:

| | | | |
|---|---------|---|---|
| + | MAPAER | | start real-time color map of aerosol |
| + | AEROFF | | stop real-time color of aerosol |
| | @EXPAND | I | zoom factor (default is 3) |
| | @WHITE | I | minimum value of range corrected signal -- when it falls below this value it will be white |
| | @BLACK | I | maximum value of range corrected signal -- when it falls above this value it will be black |
| | @ALTCOR | I | aligns data such that pressure altitude ground is at third tic mark from bottom |
| | NORMAL | I | normalizes return by E0/E where E0 is first shot energy computed for energy monitor channel I and E is the energy of that channel on each shot |
| | @CUTOFF | I | zero fill data if value greater than I |
| | @MARKER | | places a solid black line on plot |
| | @RETURN | I | plot the I return (either 1 or 2) |
| | @LABEL | I | place time and position every I minutes |

The following commands are identical in function as those listed in the previous section but the "@" preceding each command directs the action to the color aerosol display on the Act II.

@UNIT @SMOOTH @BGWORD @BGWIND @INDEX @PLTAVG

7. Ozone Color-Scale Commands:

| | | | |
|---|---------|---|--|
| + | MAPUV | | start real-time color map of ozone |
| + | UVOFF | | stop real-time color of ozone |
| + | *WHITE | I | minimum value of ozone -- when it falls below this value it will be white |
| + | *BLACK | I | maximum value of ozone -- when it falls above this value it will be black |
| + | *ALTCOR | I | aligns data such that pressure altitude ground is at third tic mark from bottom -- only works for nadir data |
| + | *LABEL | I | place time and position every I minutes |

The following commands are identical in function as those listed in the previous section but the "*" preceding each command directs the action to the color ozone display on the Act II.

| | | | | | |
|--------|---------|---------|---------|---------|---------|
| *UNIT | *BGWORD | *BGWIND | *SMOOTH | *RNGCEL | *FLTAVG |
| *INDEX | *GASEXP | *SHFTOA | *ATMCOR | *RAYCOR | |

REFERENCES

1. E. V. Browell, A. F. Carter, S. T. Shipley, R. J. Allen, C. F. Butler, M. N. Mayo, J. H. Siviter, and W. M. Hall, "NASA Multipurpose Airborne DIAL System and Measurements of Ozone and Aerosol Profiles", Appl. Opt. 22, p522, 1983.
2. C. F. Butler, "Theory and Operation of the Real-Time Data Acquisition System for the NASA-LaRC Differential Absorption Lidar", Old Dominion University, Norfolk, Va., Tech. Report GSTR-86-4 (1986).
3. R. J. Allen, "Pre-Shuttle Lidar System Research", to be published by the Dept. of Electrical Engineering and Computer Science, The George Washington University, Washington, D.C.

HARDWARE MANUALS

Chassis

MLSI-BA11-600 Series of Chassis Assemblies for use with DEC LSI-11 Computers, MDB Systems, Inc. 1982 P/N 80033600.

Disk Drive

DSD-480 Flexible Disk System Installation and Programming Manual, Data Systems Design, Inc., 1980, P/N DSD 040003-01.

DSD 440/480 Flexible Disk Data Storage Systems Service Manual, Data Systems Designs, Inc., 1983, P/N DSD 040023-01.

Interprocessor Link

MLSI-DA11B01 Interprocessor Link Instruction Manual, MDB Systems, Inc. 1980

Magnetic Tape Drive

Model FB80 Magnetic Tape Transport, Volume 1, Operation and Maintenance, Cipher Data Products, 1983, P/N 799816-003E.

Model DQ130 Magnetic Tape Coupler Instruction Manual, Distributed Logic Corp., 1982, P/N 30002-1.

Magnetic Tape Software Aids and Diagnostics, Distributed Logic Corp., 1982, P/N 30050-0.

Digitizers

Model 2010S/2012S Transient Recorder, DSP Technology, Inc.

Model 1020 Differential Amplifier, DSP Technology, Inc.

Transiac Model 4100 Signal Averaging Memory, DSP Technology, Inc., 1986.

Model 1500 Powered Camac Crate, Kinetic Systems, 1982

Model 3920-Z1B General Purpose Crate Controller, Kinetics Systems, 1982.

Model 2920-Z1D LSI-11/PDP-11 Bus Adaptors, Kinetics Systems, 1982.

Model 6210 Driver Series, Kinetic Systems, 1982.

Loran Interface

MLSI-DRV11-C Parallel Line Interface Module Instruction Manual,
MDB Systems, Inc., 1978, P/N 800403346.

A/D Converter

FDP-11 Microcomputer Interfaces Handbook 1983-84, Digital
Equipment Corp, 1983 (ADV11-C p. 53).

Line Printer

Trilog T-100 Applications Manual, Trilog Inc., 1981, P/N 110007
Rev. B.

MLSI-LP11 Line Printer Controller for use with DEC LSI-11
Computers Instruction Manual, MDB Systems, Inc., 1977, P/N
80040318.

Teletype

Ann Arbor Model 400S Display Terminal, Ann Arbor Terminals, Inc.,
1977, P/N 208534.

PM-DLV11J Serial Line Interface Module, Plessey Peripheral
Systems, 1982, P/N MA 705020.

Time

Timing Control Unit TCU-50 DYR, Digital Pathways, Inc., 1982.
Timing Control Unit TCU-50, Digital Pathways.

Graphic Display

ORGB-GRAPH, Colour Graphics Controller, Manual No. 173-A50-02/11,
1983.

LSI 11/73 CPU

KDJ11-A CPU Module User's Guide, Digital Equipment Corporation,
P/N EK-KDJ1A-UG-001, 1984.

Front-End Processor

MLSI-JFEP11 Front-End Processor Hardware/Software Reference
Manual, MDB Systems Inc., P/N 80040396 Rev B.